


| Front Harness    |                 |                  |
|------------------|-----------------|------------------|
| Connector Number | Location        | Description      |
| C2B              | RT FIREWALL     | BULKHEAD         |
| C36F             | RT FIREWALL     | BREAKER          |
| C37F             | RT FIREWALL     | MAIN RELAY       |
| C38F             | RT FIREWALL     | FUSE BOX         |
| C39F             | LFT COWL        | ENG OIL TEMP     |
| C40F             | LFT FRAME RAIL  | BOSCH ABS INLINE |
| C41              | LEFT FRONT      | TRANS OIL TEMP   |
| C42A             | RIGHT FRONT     | CAN 1 INLINE     |
| C43              | NEAR PDB        | PCM/DIFF PWR     |
| C44              | NEAR MASTER CYL | BOSCH ABS DIAG   |
| C45              | RT FRONT        | CAN 1 TERM       |

| Switch Harness   |              |
|------------------|--------------|
| Connector Number | Description  |
| SH1              | SWITCHES     |
| SH2              | SWITCHES     |
| SW1              | ABS ROT KNOB |
| SW2              | REV MATCH    |
| SW3              | LIFT PUMP    |
| SW4              | DIFF PUMP    |
| SW5              | ABS MSTR     |
| SW6              | SPARE 1      |
| SW7              | SPARE 2      |
| SW8              | RAIN LAMP    |


| Steering Wheel Harness |                |
|------------------------|----------------|
| Connector Number       | Description    |
| C22B                   | STEERING WHEEL |
| C45                    | ALARM          |
| C46                    | PIT            |
| C47                    | DASH MODE      |
| C48                    | RADIO          |


| Cockpit Harness  |                  |                  |                  |                      |                      |
|------------------|------------------|------------------|------------------|----------------------|----------------------|
| Connector Number | Location         | Description      | Connector Number | Location             | Description          |
| C1               | STEERING COL     | MoTec C187       | C24              | CENTER IP            | LOWER SW PANEL       |
| C2A              | RT FIREWALL      | BULKHEAD         | C25              | CENTER IP            | ABS ROT KNOB         |
| C3               | GLOVE BOX        | C187 COMMS       | C26              | CENTER IP            | MASTER SW INT        |
| C3A              | BEHIND IP CENTER | C187 COMMS       | C27              | CENTER IP            | IGN SW               |
| C3B              | BEHIND IP CENTER | C187 COMMS       | C28              | CENTER IP            | MIRROR SWITCH        |
| C4               | BEHIND GLOVE BOX | SPARE 1          | C29              | RT OF TRANS TUNNEL   | PTT                  |
| C5               | BEHIND GLOVE BOX | SPARE 2          | C30              | RT OF TRANS TUNNEL   | RADIO PWR            |
| C6               | BEHIND GLOVE BOX | SPARE 3          | C31              | RT OF TRANS TUNNEL   | IMSA PWR             |
| C7A              | RT A PILLAR      | GROUND           | C32              | REAR OF TRANS TUNNEL | BOSCH YAW/ACCEL      |
| C7C              | RT B PILLAR      | GROUND           | C33              | TRUNK                | LIFT PUMPS           |
| C8               | BEHIND GLOVE BOX | SPARE 4          | C34              | BEHIND MOTEC         | CAN 1 TERM           |
| C9               | BEHIND GLOVE BOX | SPARE 5          | C35A             | BEHIND MOTEC         | CAN 3                |
| C10              | BEHIND GLOVE BOX | SPARE 6          | C36C             | RT A PILLAR          | DIFF FANS PWR        |
| C11              | BEHIND GLOVE BOX | SPARE 7          | C37C             | RT DIFF FAN          | DIFF FAN 1           |
| C12              | BEHIND GLOVE BOX | SPARE 8          | C38C             | LT DIFF FAN          | DIFF FAN 2           |
| C13              | BEHIND GLOVE BOX | SPARE TEMP 1     | C39C             | GLOVE BOX            | BOSCH ABS DIAG       |
| C14              | RT A PILLAR      | GPS              | C40C             | RT A PILLAR          | RAIN LAMP            |
| C15              | RT A PILLAR      | BCM IGN          | C41A             | LT EX COWL           | MASTER SW EXT INLINE |
| C16              | RT A PILLAR      | PASSENGER MIRROR | C41B             | LF EX COWL           | MASTER SW EXT INLINE |
| C17              | RT A PILLAR      | BJB POWER 1      | C79              | BEHIND MOTEC         | CAN 4 TERM           |
| C18              | RT A PILLAR      | BJB TRIG 2       | C80              | BEHIND GLOVE BOX     | CAN 4 CUST ACCESS    |
| C19              | LT EX COWL       | MASTER SW EXT    |                  |                      |                      |
| C20              | LT A PILLAR      | DRIVER MIRROR    |                  |                      |                      |
| C21              | PEDAL BOX        | BRAKE LIGHT SW   |                  |                      |                      |
| C22A             | STEERING COL     | STEERING WHEEL   |                  |                      |                      |
| C23A             | CENTER IP        | UPPER SW PANEL   |                  |                      |                      |
| C23B             | CENTER IP        | UPPER SW PANEL   |                  |                      |                      |


| CAN Bridge Harness |                       |                   |
|--------------------|-----------------------|-------------------|
| Connector Number   | Location              | Description       |
| C42B               | RT FRONT              | CAN 1 INLINE      |
| C49                | RT FRONT              | FD-CAN            |
| C50A               | RT FIREWALL           | CAN BRIDGE INLINE |
| C50B               | RT FIREWALL           | CAN BRIDGE INLINE |
| C51                | CENTER IP             | CAN BRIDGE        |
| C52                | RT A PILLAR           | CAN BRIDGE PWR    |
| C53                | BEHIND GLOVE BOX      | CAN BRIDGE DIAG   |
| C7D                | FNT CNTR TRANS TUNNEL | GROUND            |

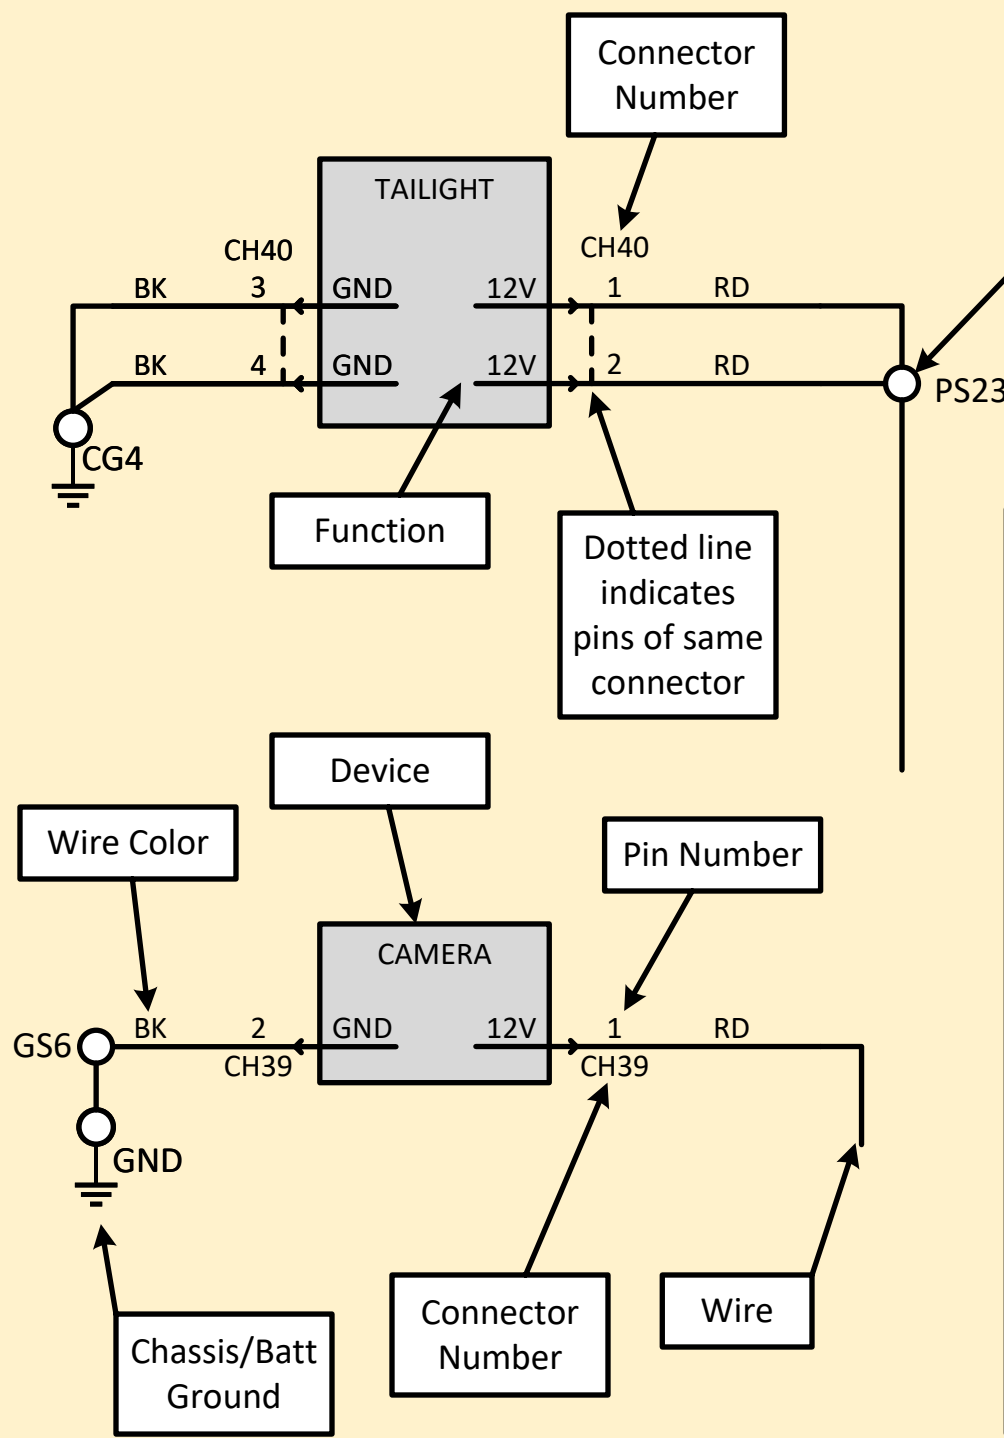



| Wire Colors |             |
|-------------|-------------|
| BK          | Black       |
| BN          | Brown       |
| BU          | Blue        |
| DB          | Dark Blue   |
| DG          | Dark Green  |
| GN          | Green       |
| GY          | Grey        |
| LB          | Light Blue  |
| LG          | Light Green |
| NA          | Natural     |
| OG          | Orange      |
| PK          | Pink        |
| RD          | Red         |
| SR          | Silver      |
| TN          | Tan         |
| VT          | Violet      |
| WH          | White       |
| YE          | Yellow      |

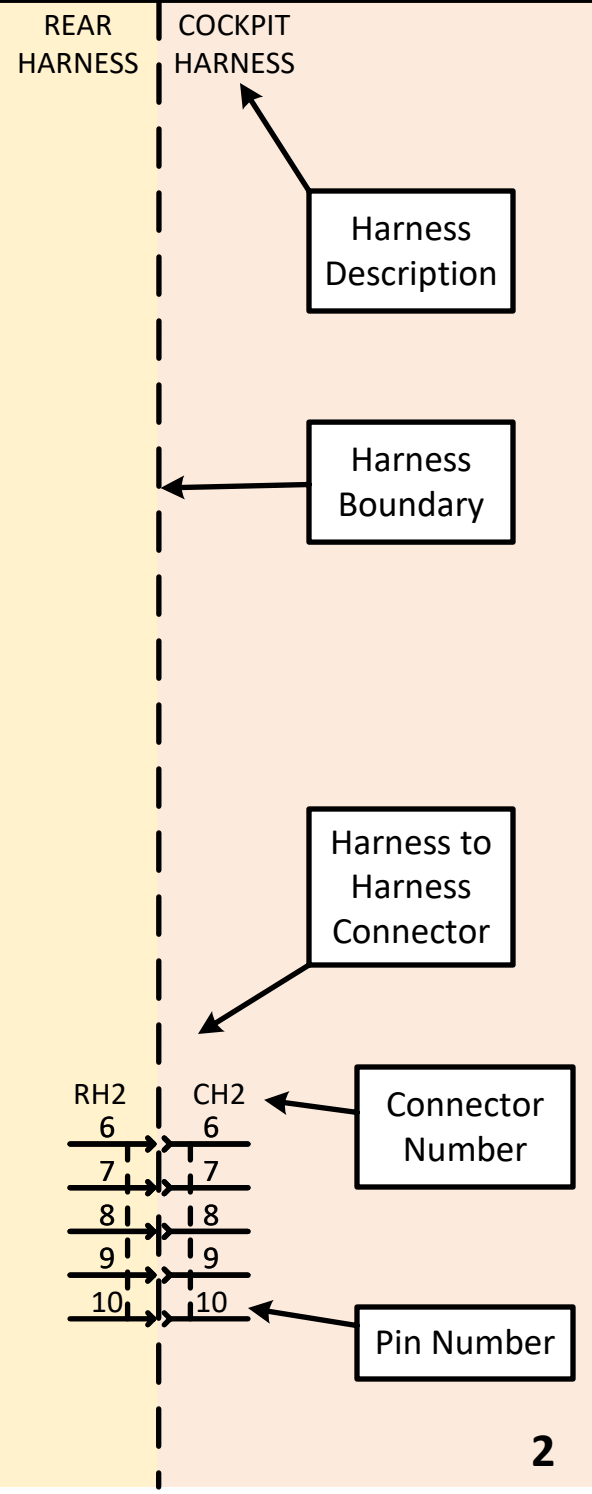





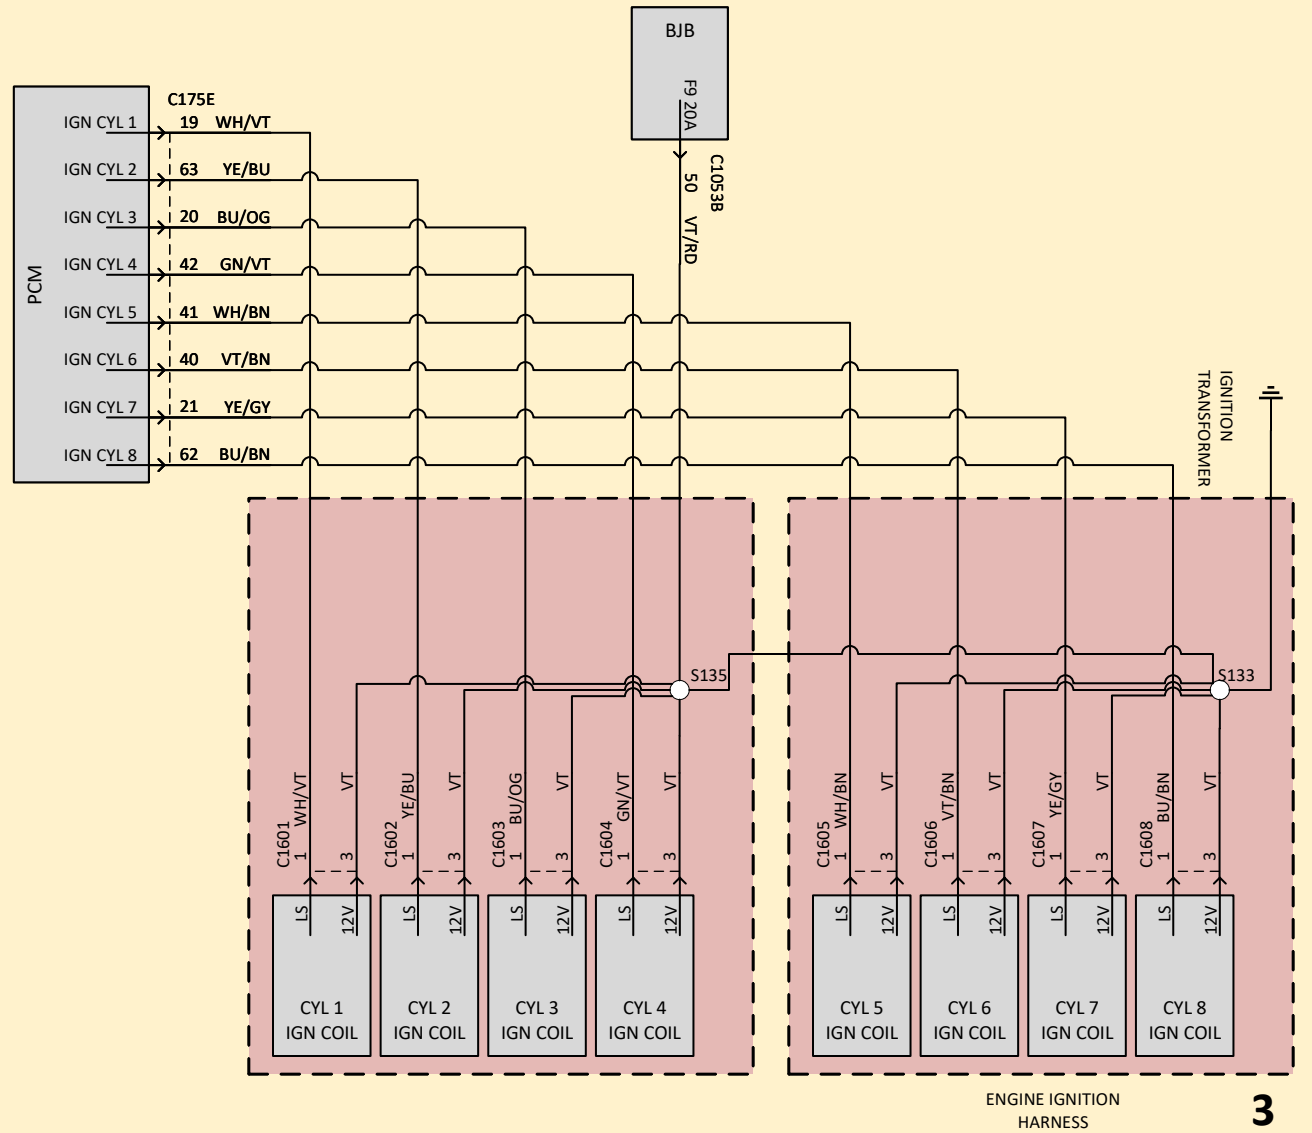


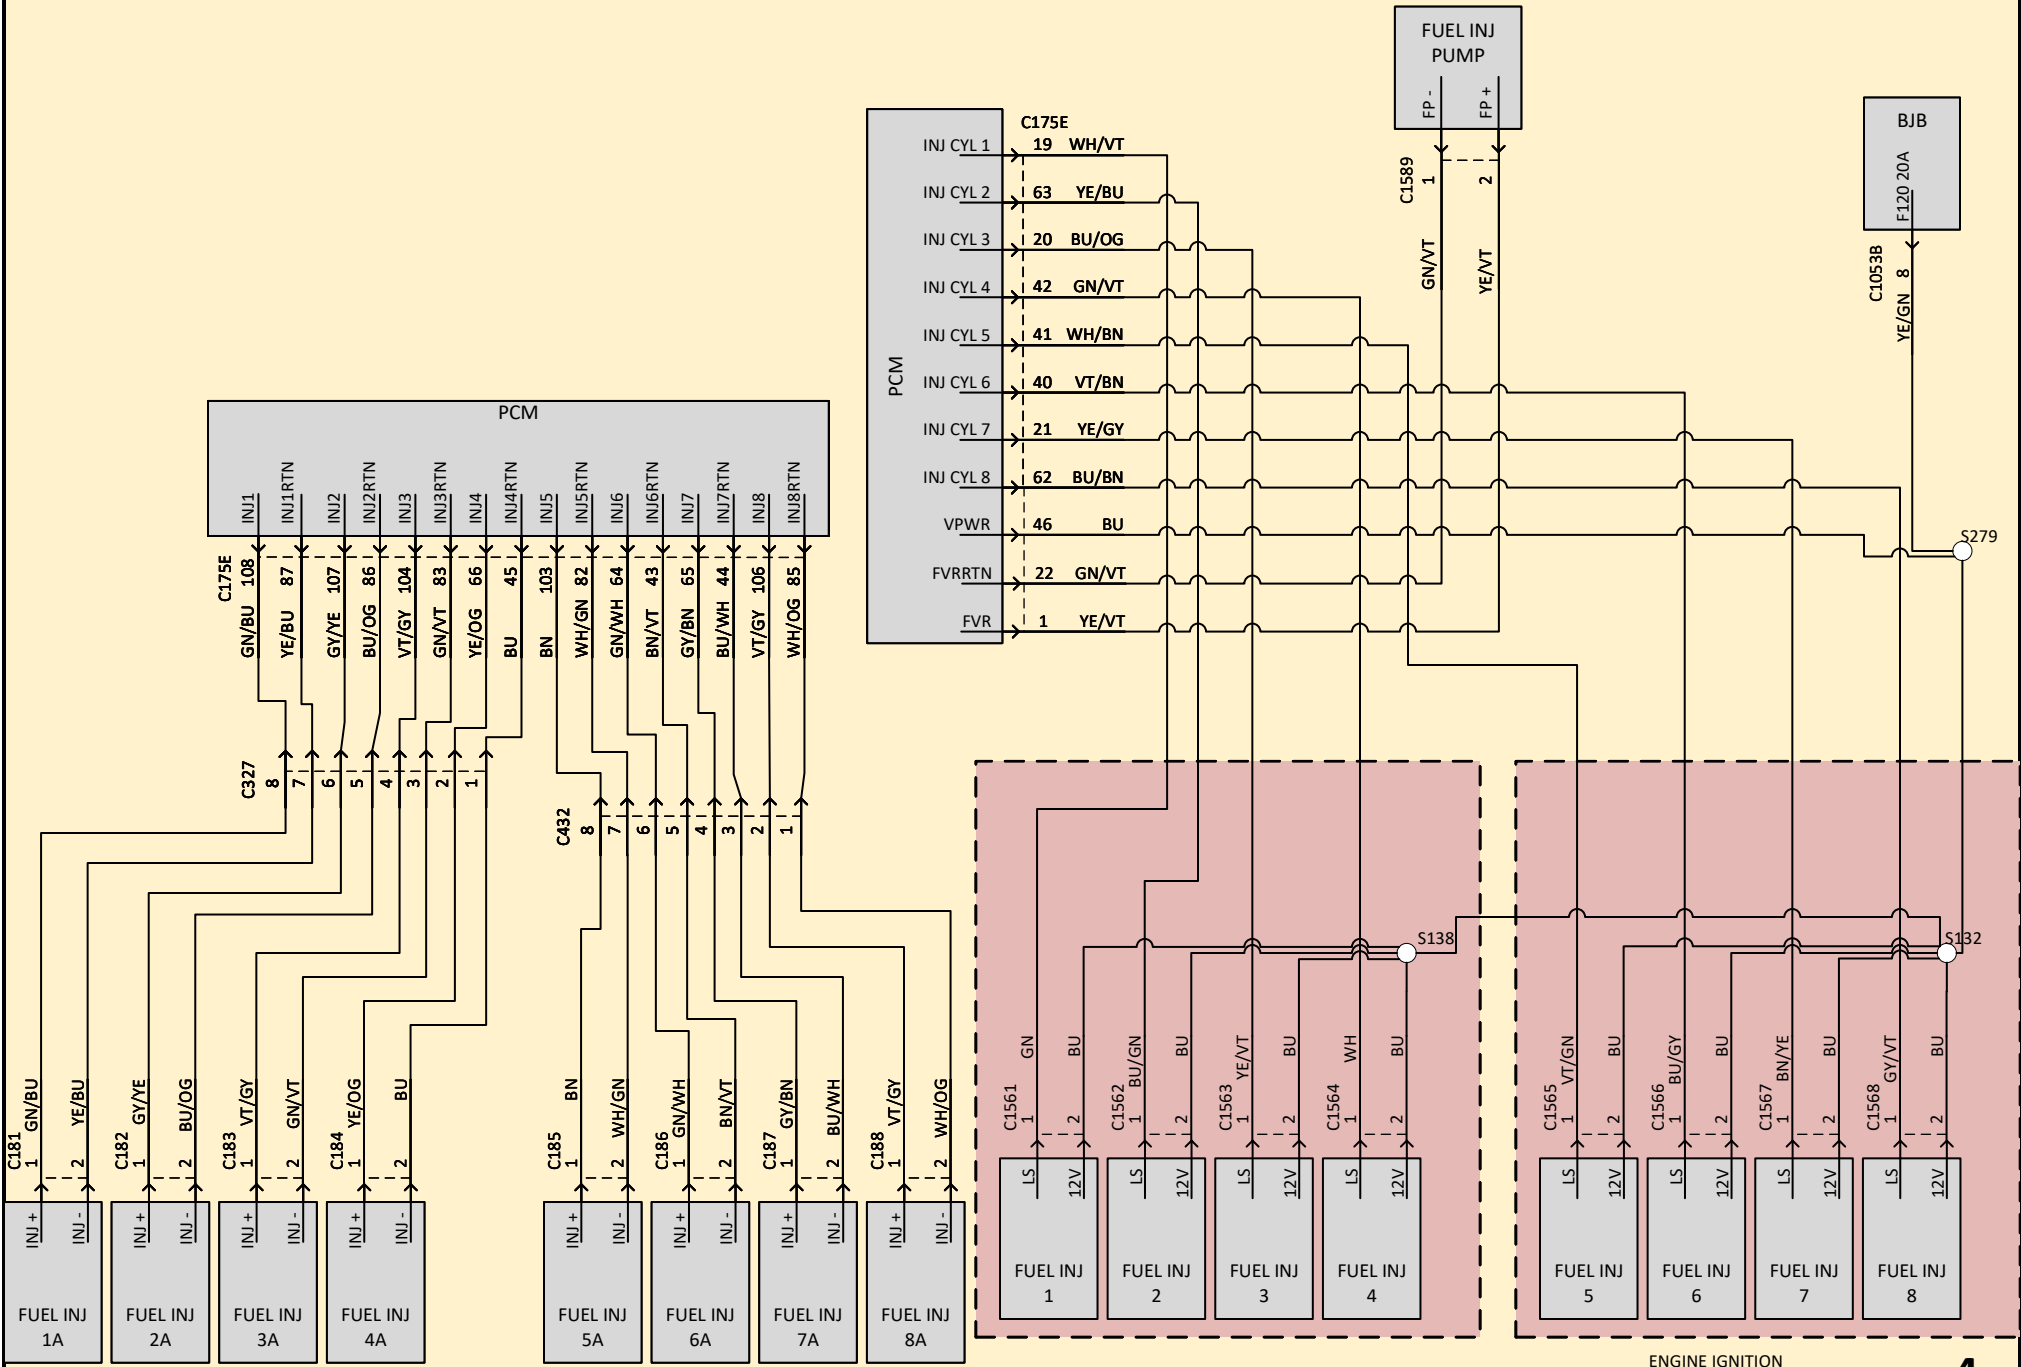


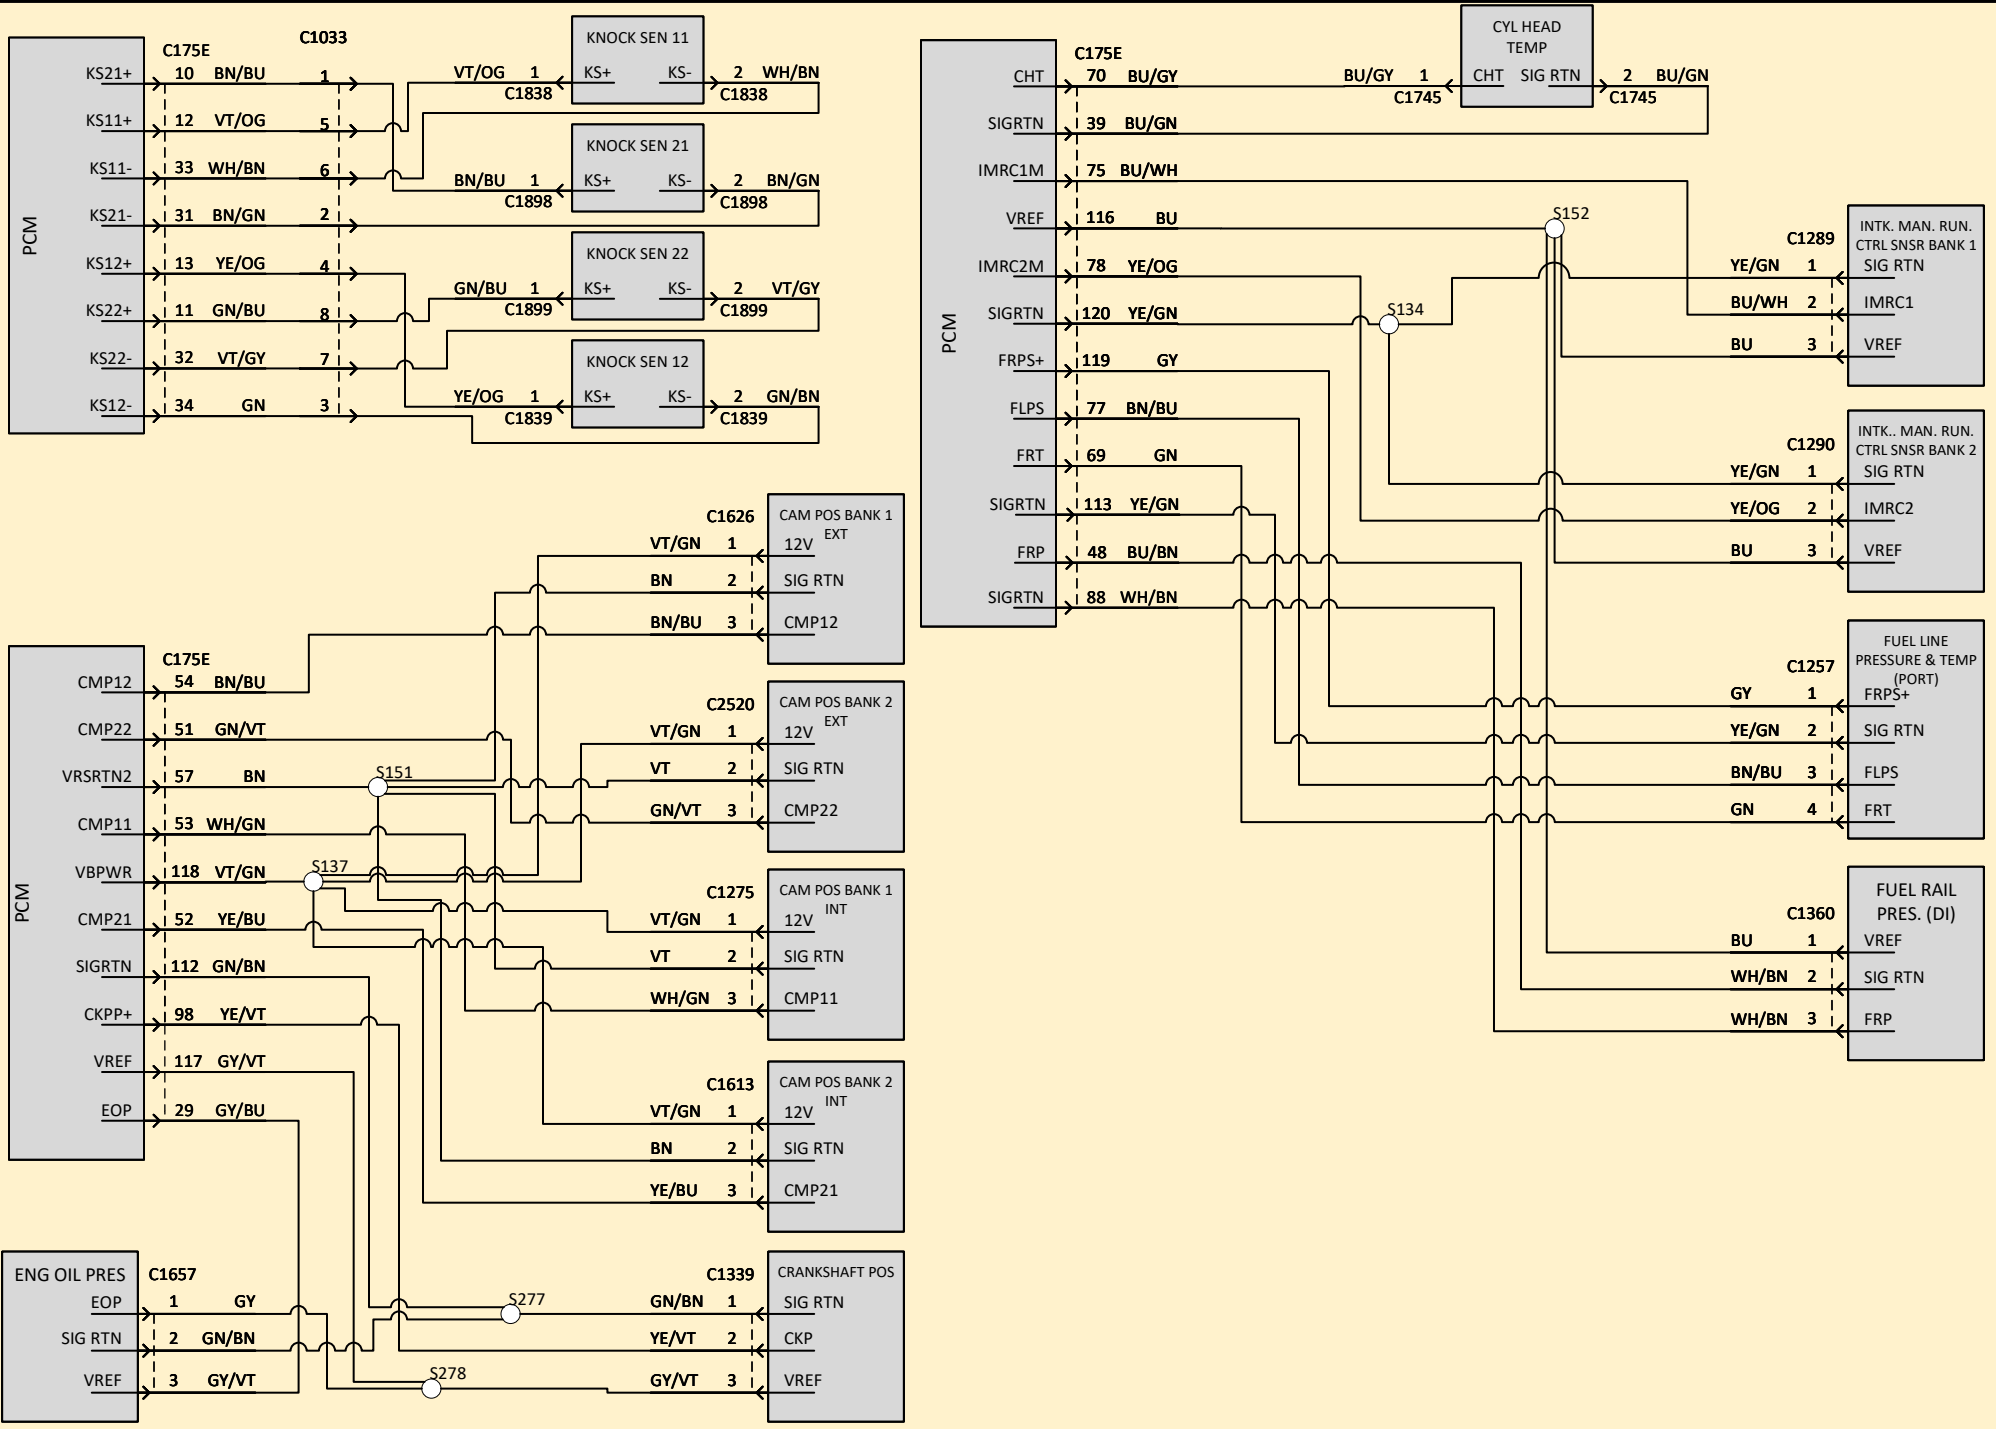


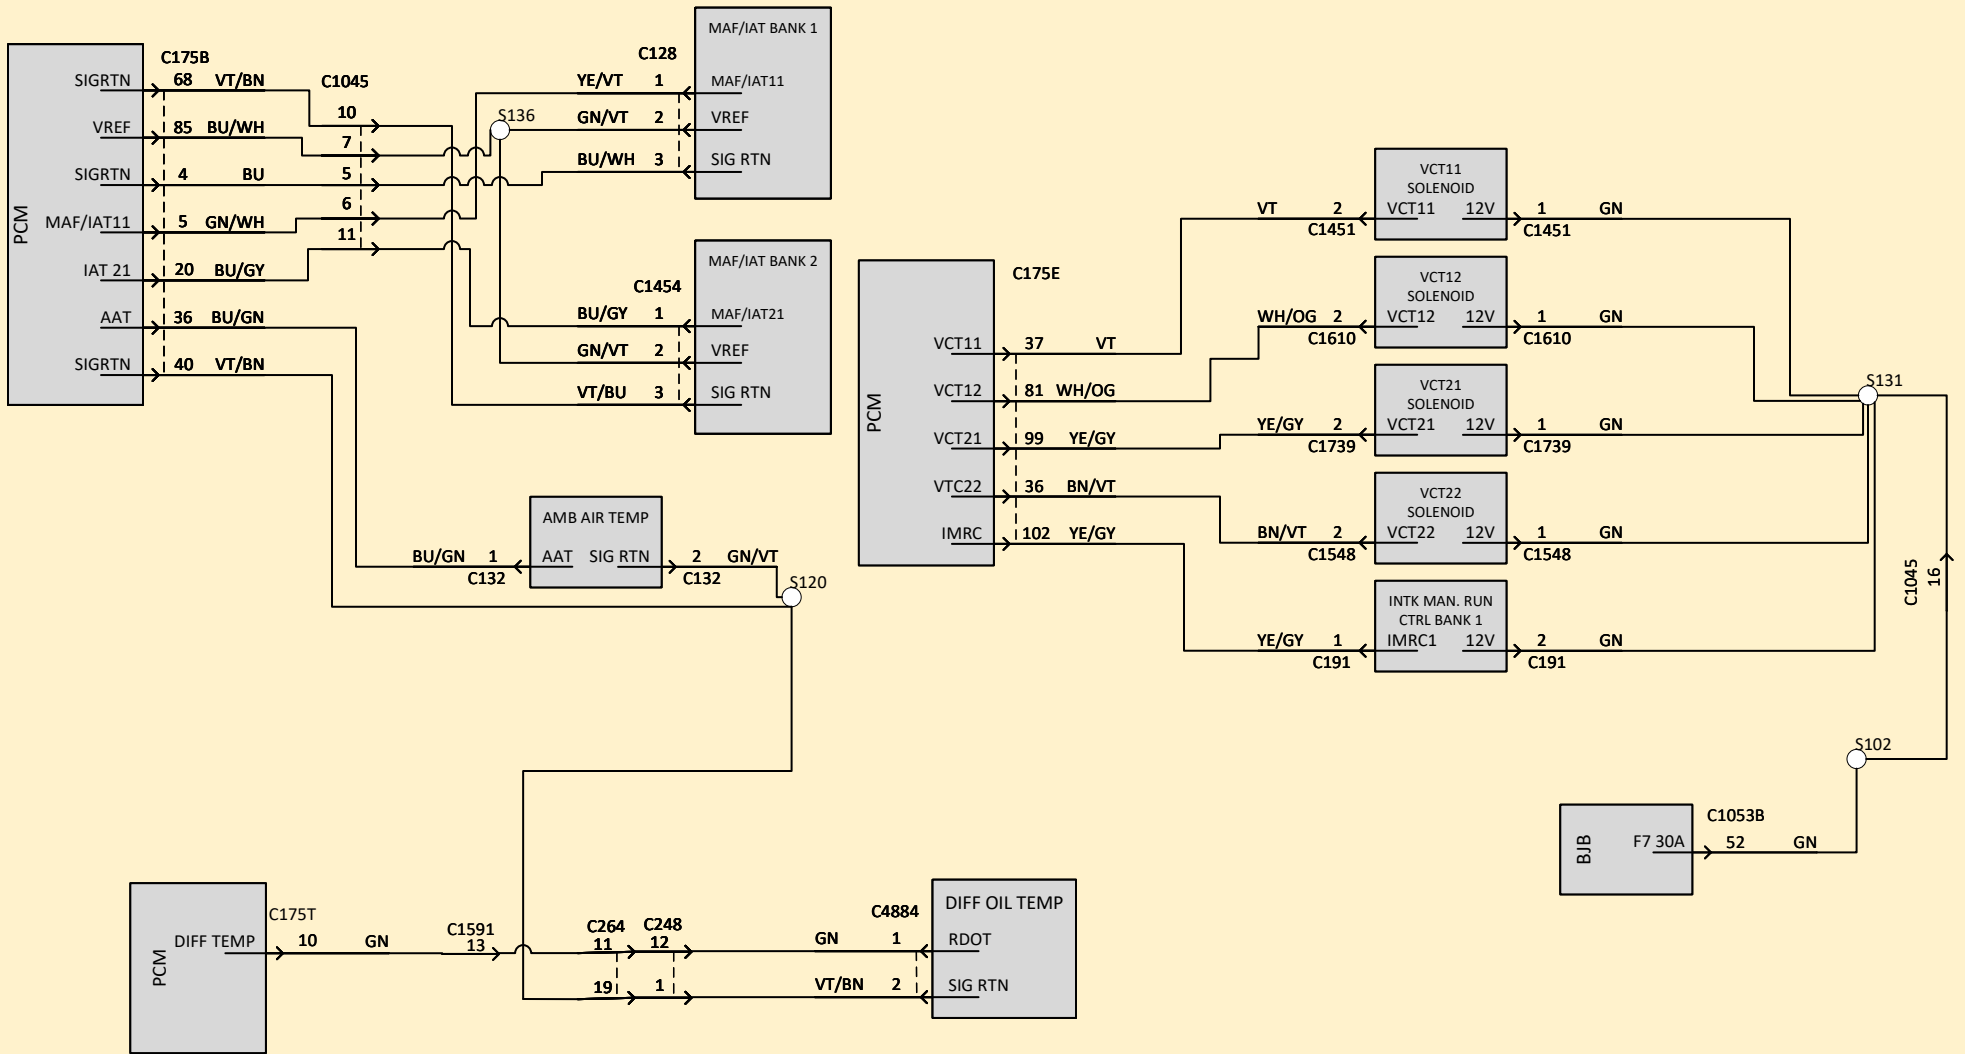


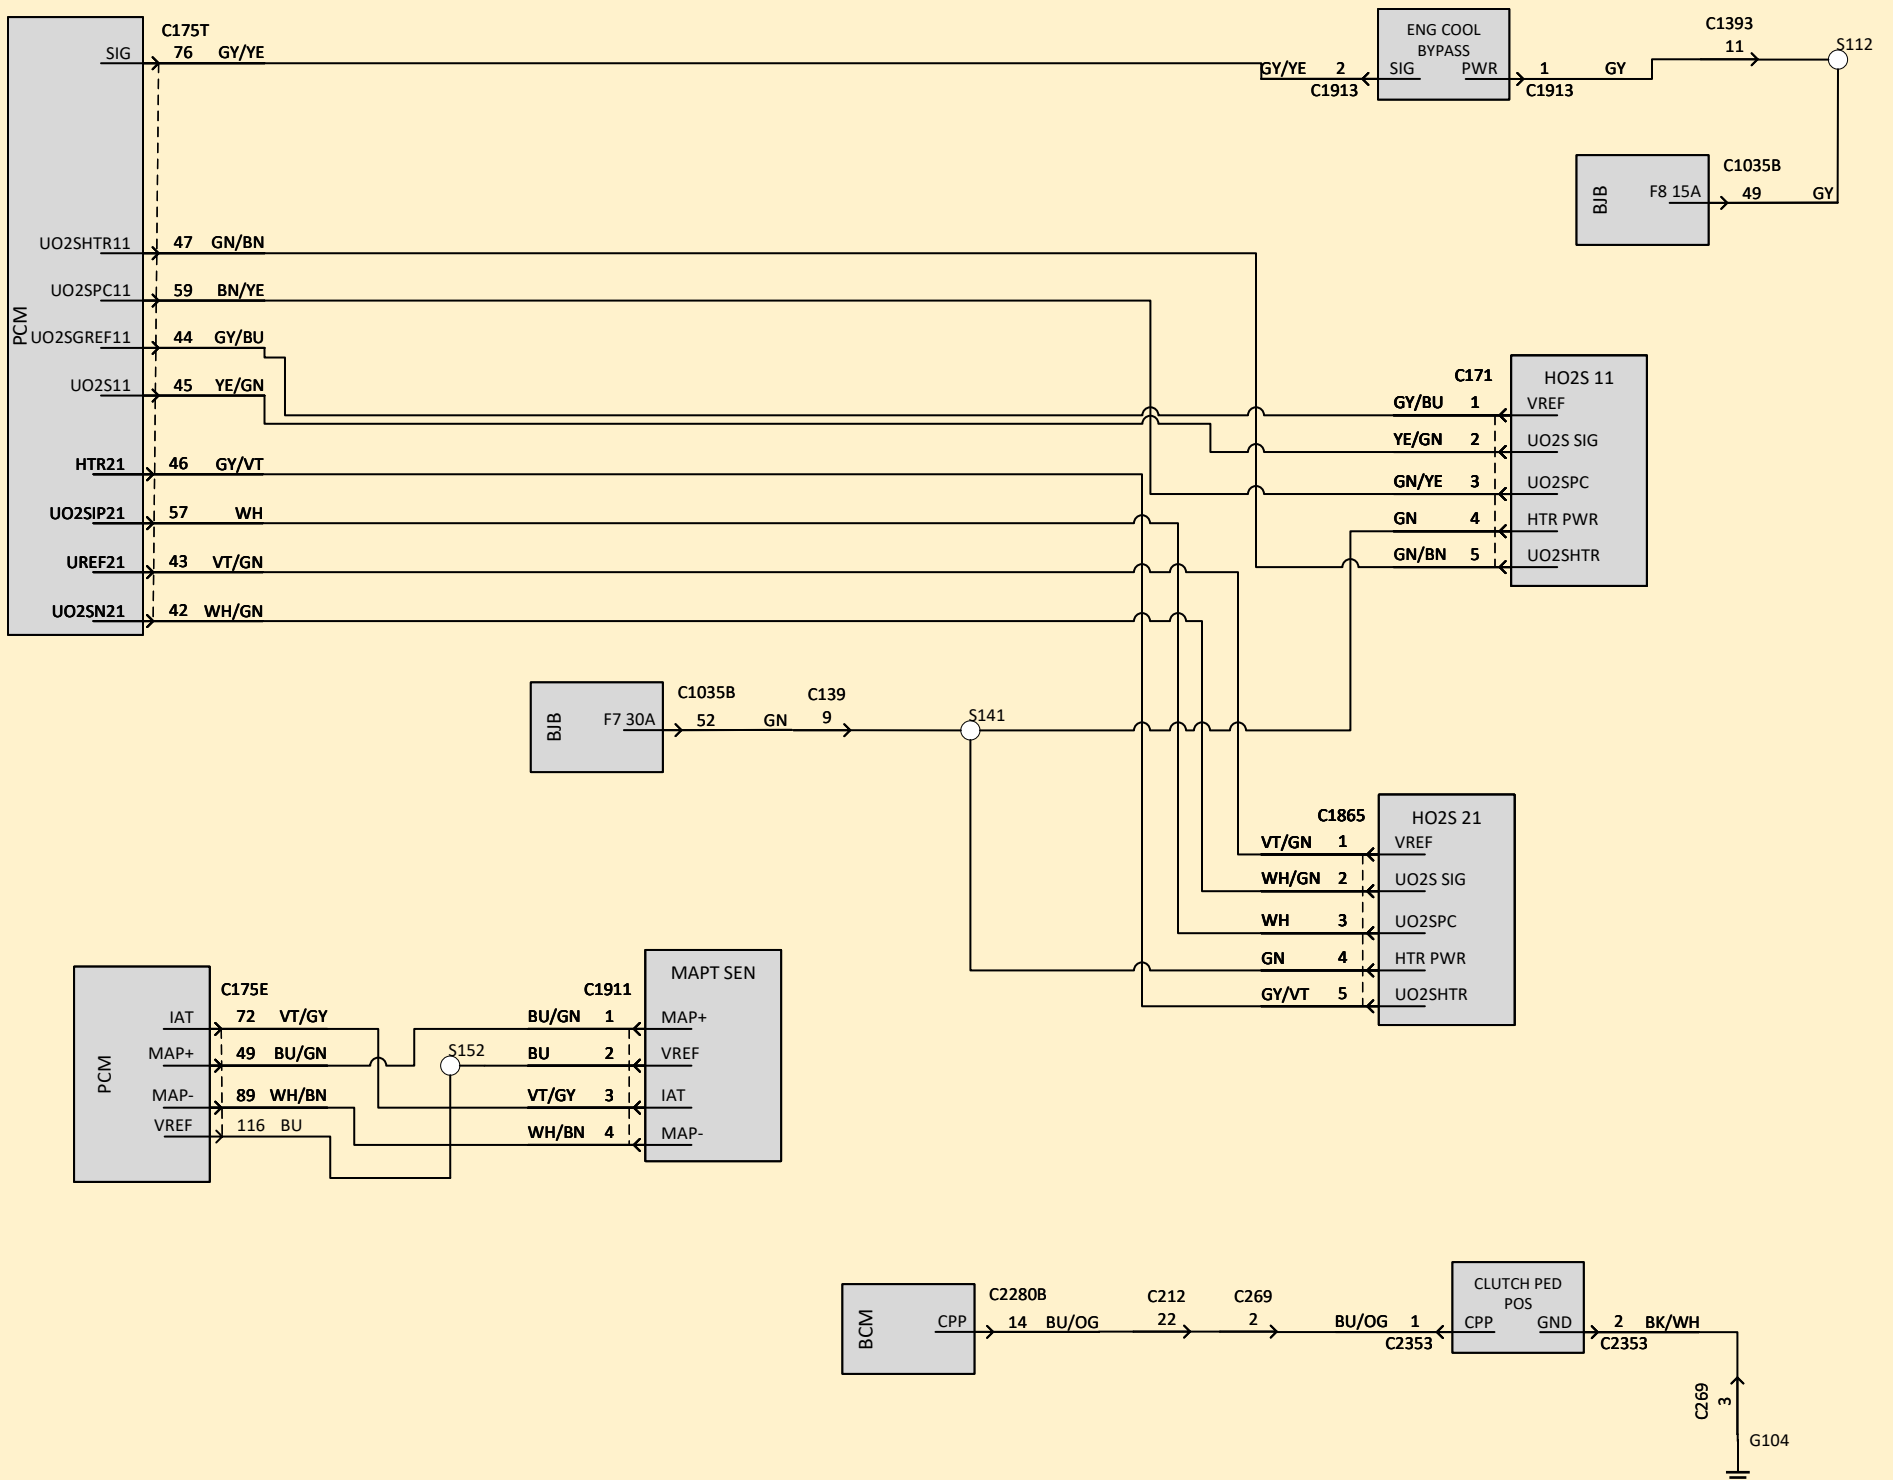


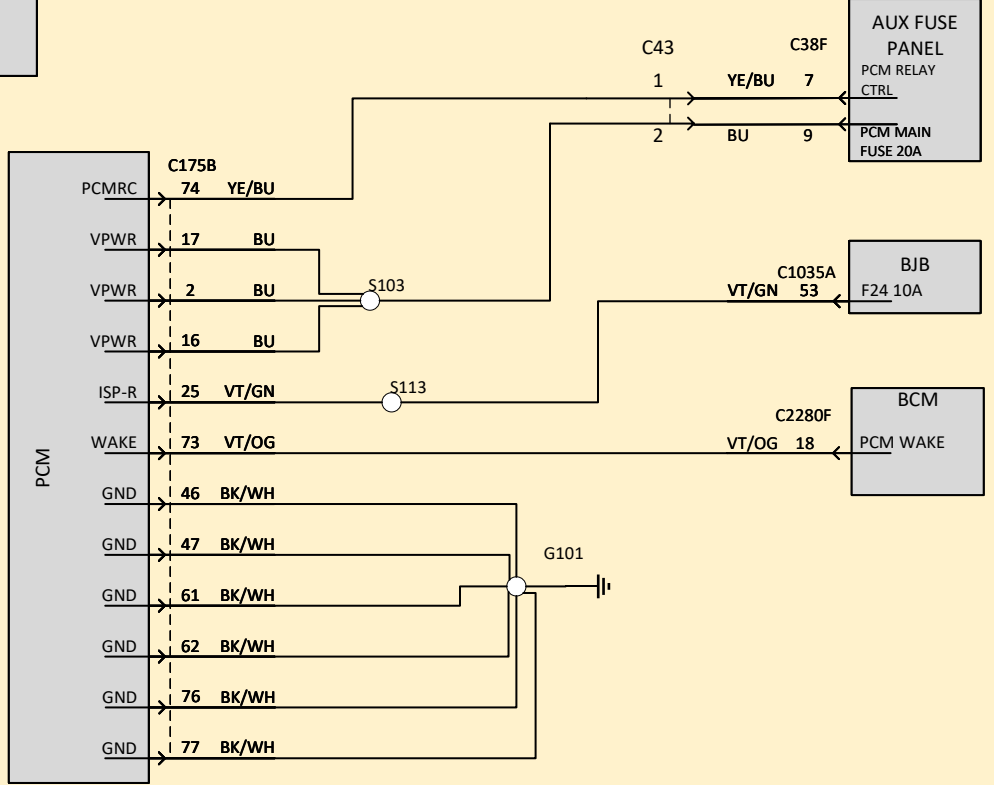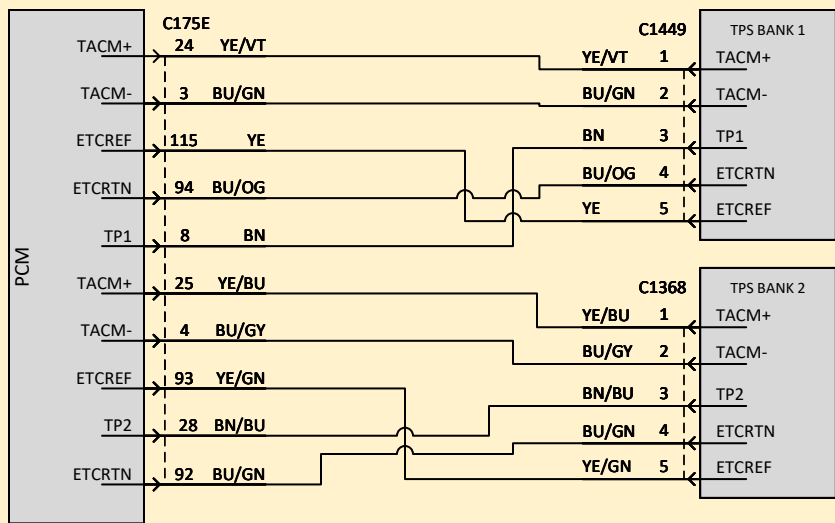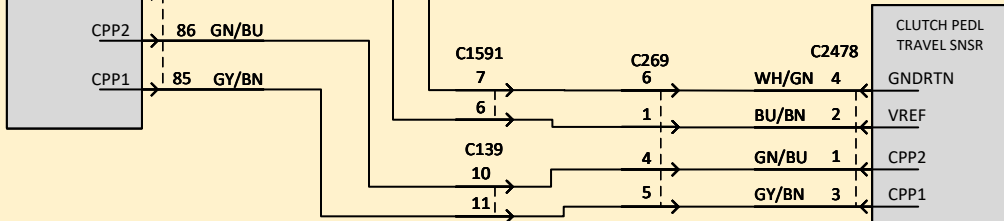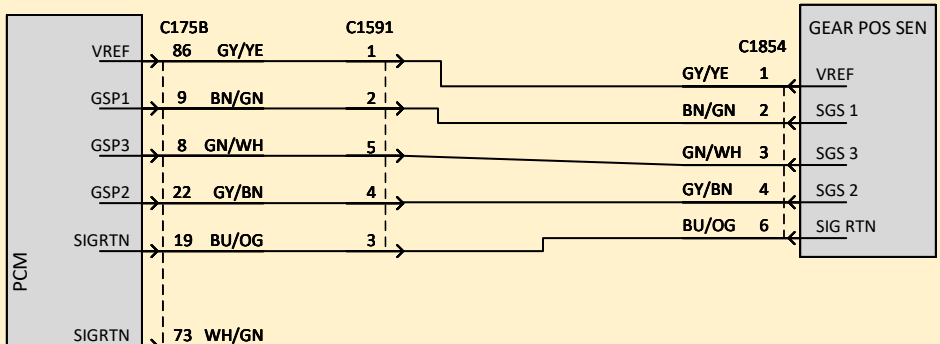





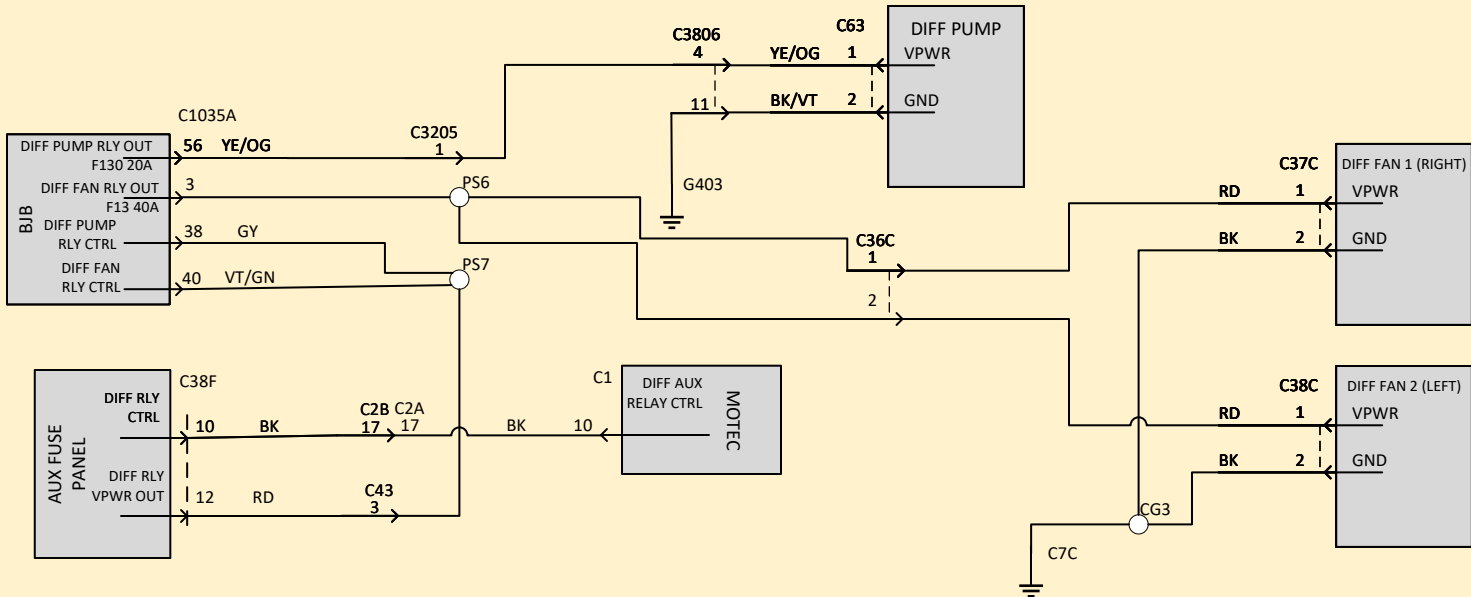
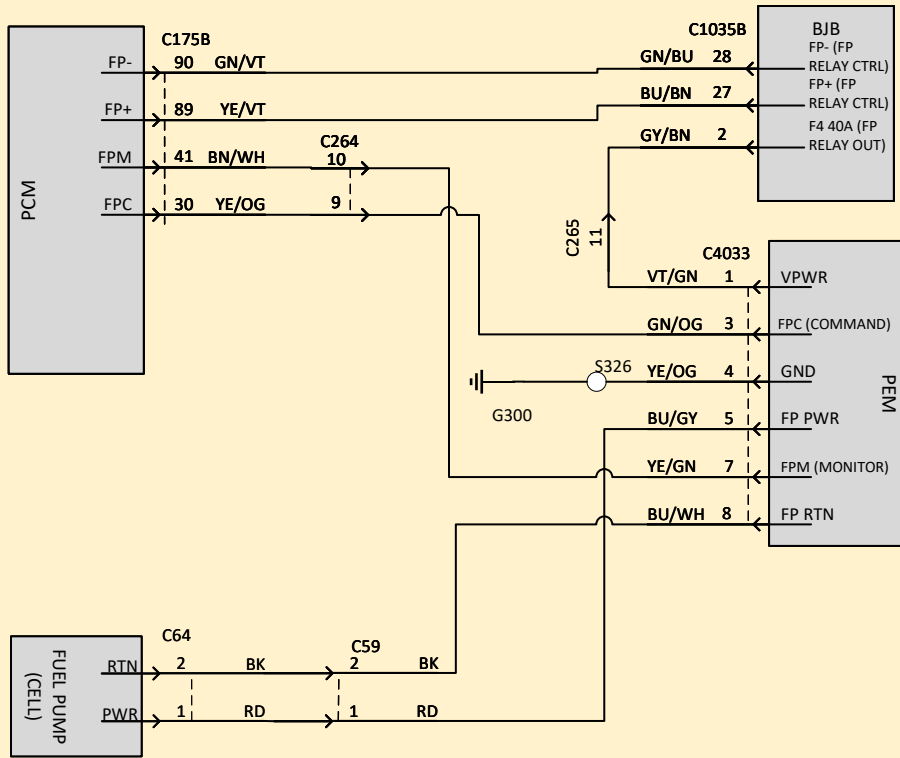


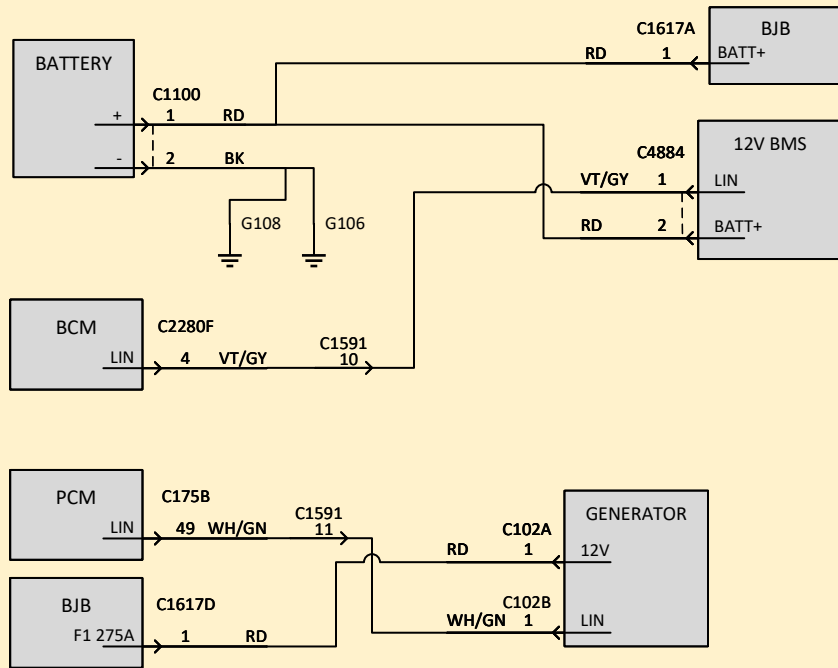


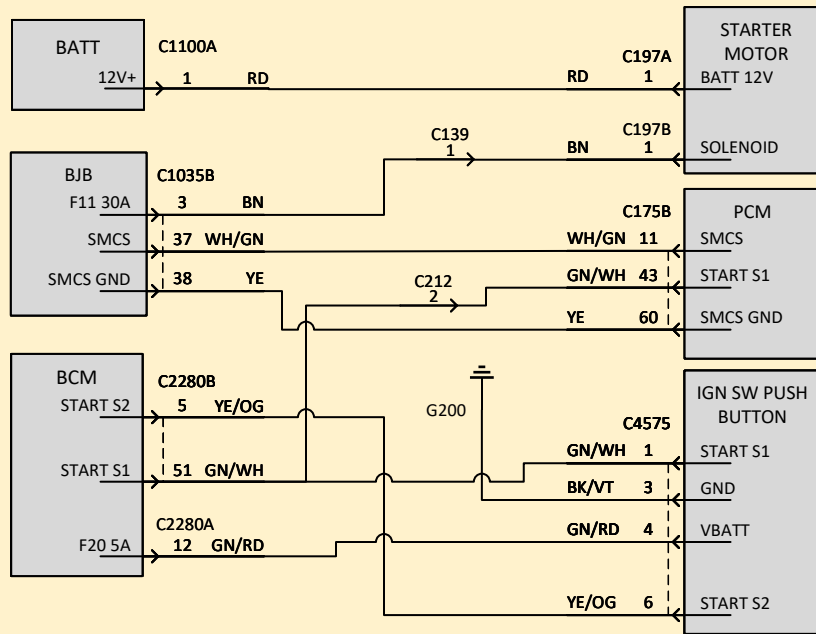


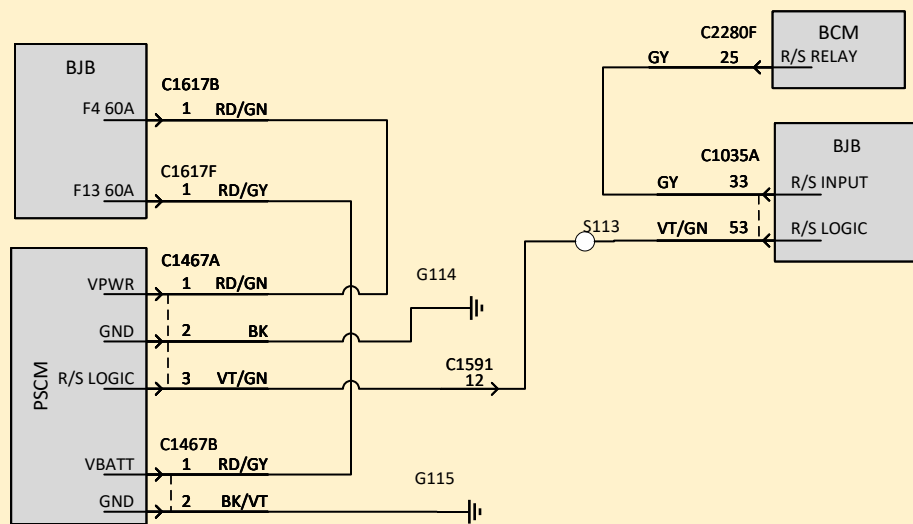

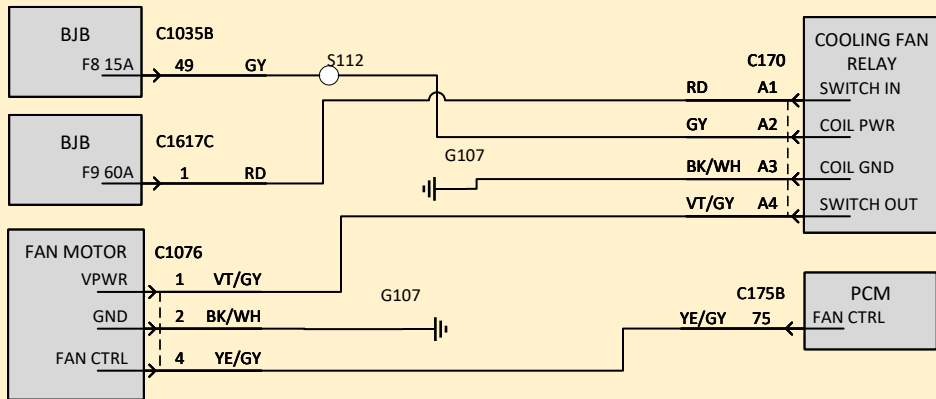

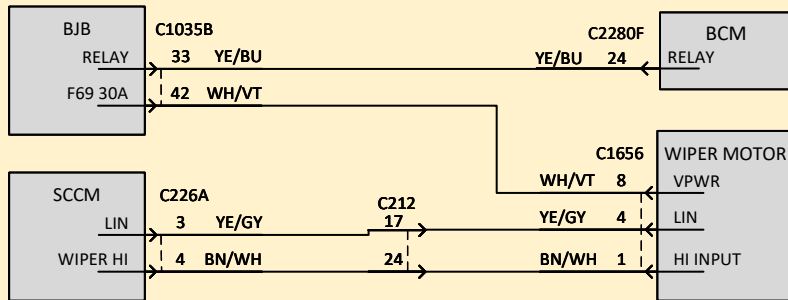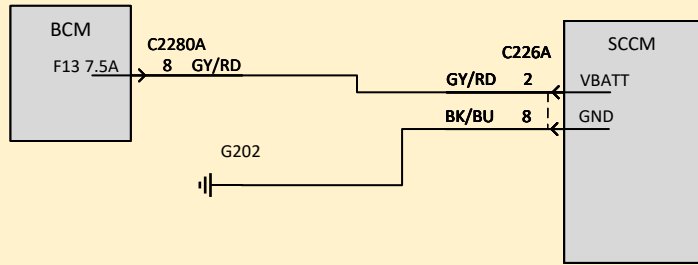


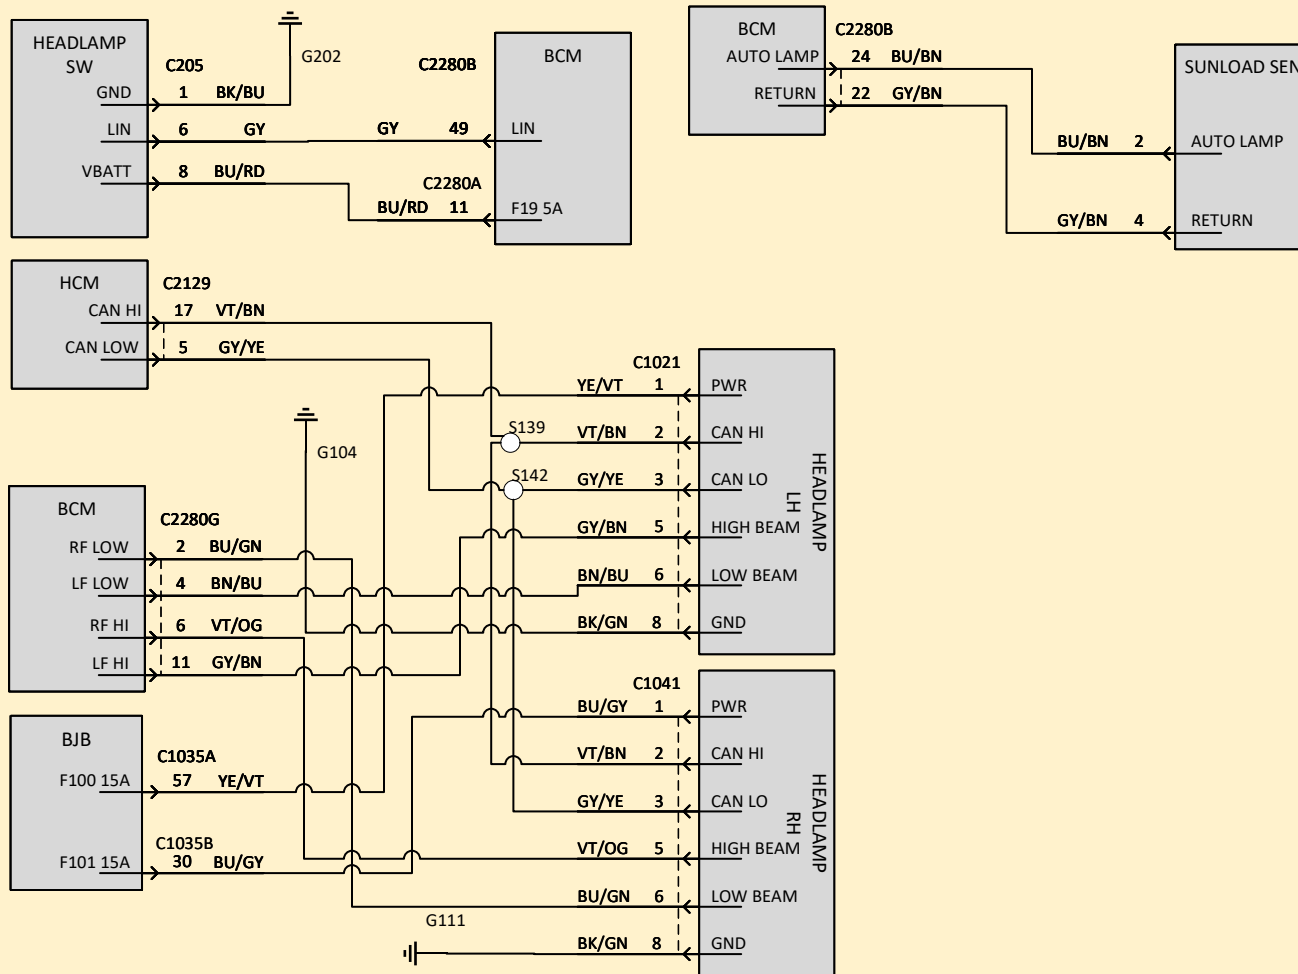


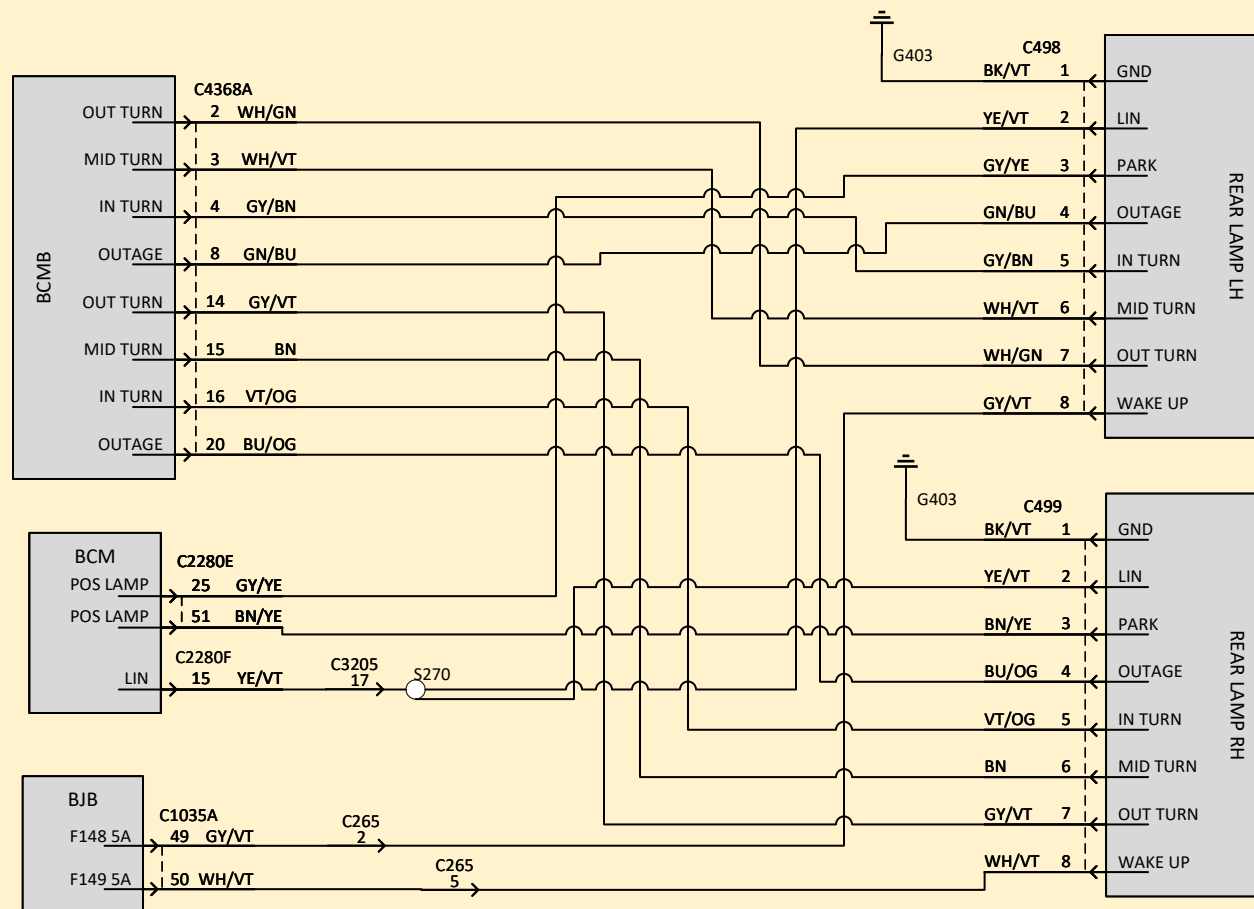



UNDERHOOD/PDB HARNESS

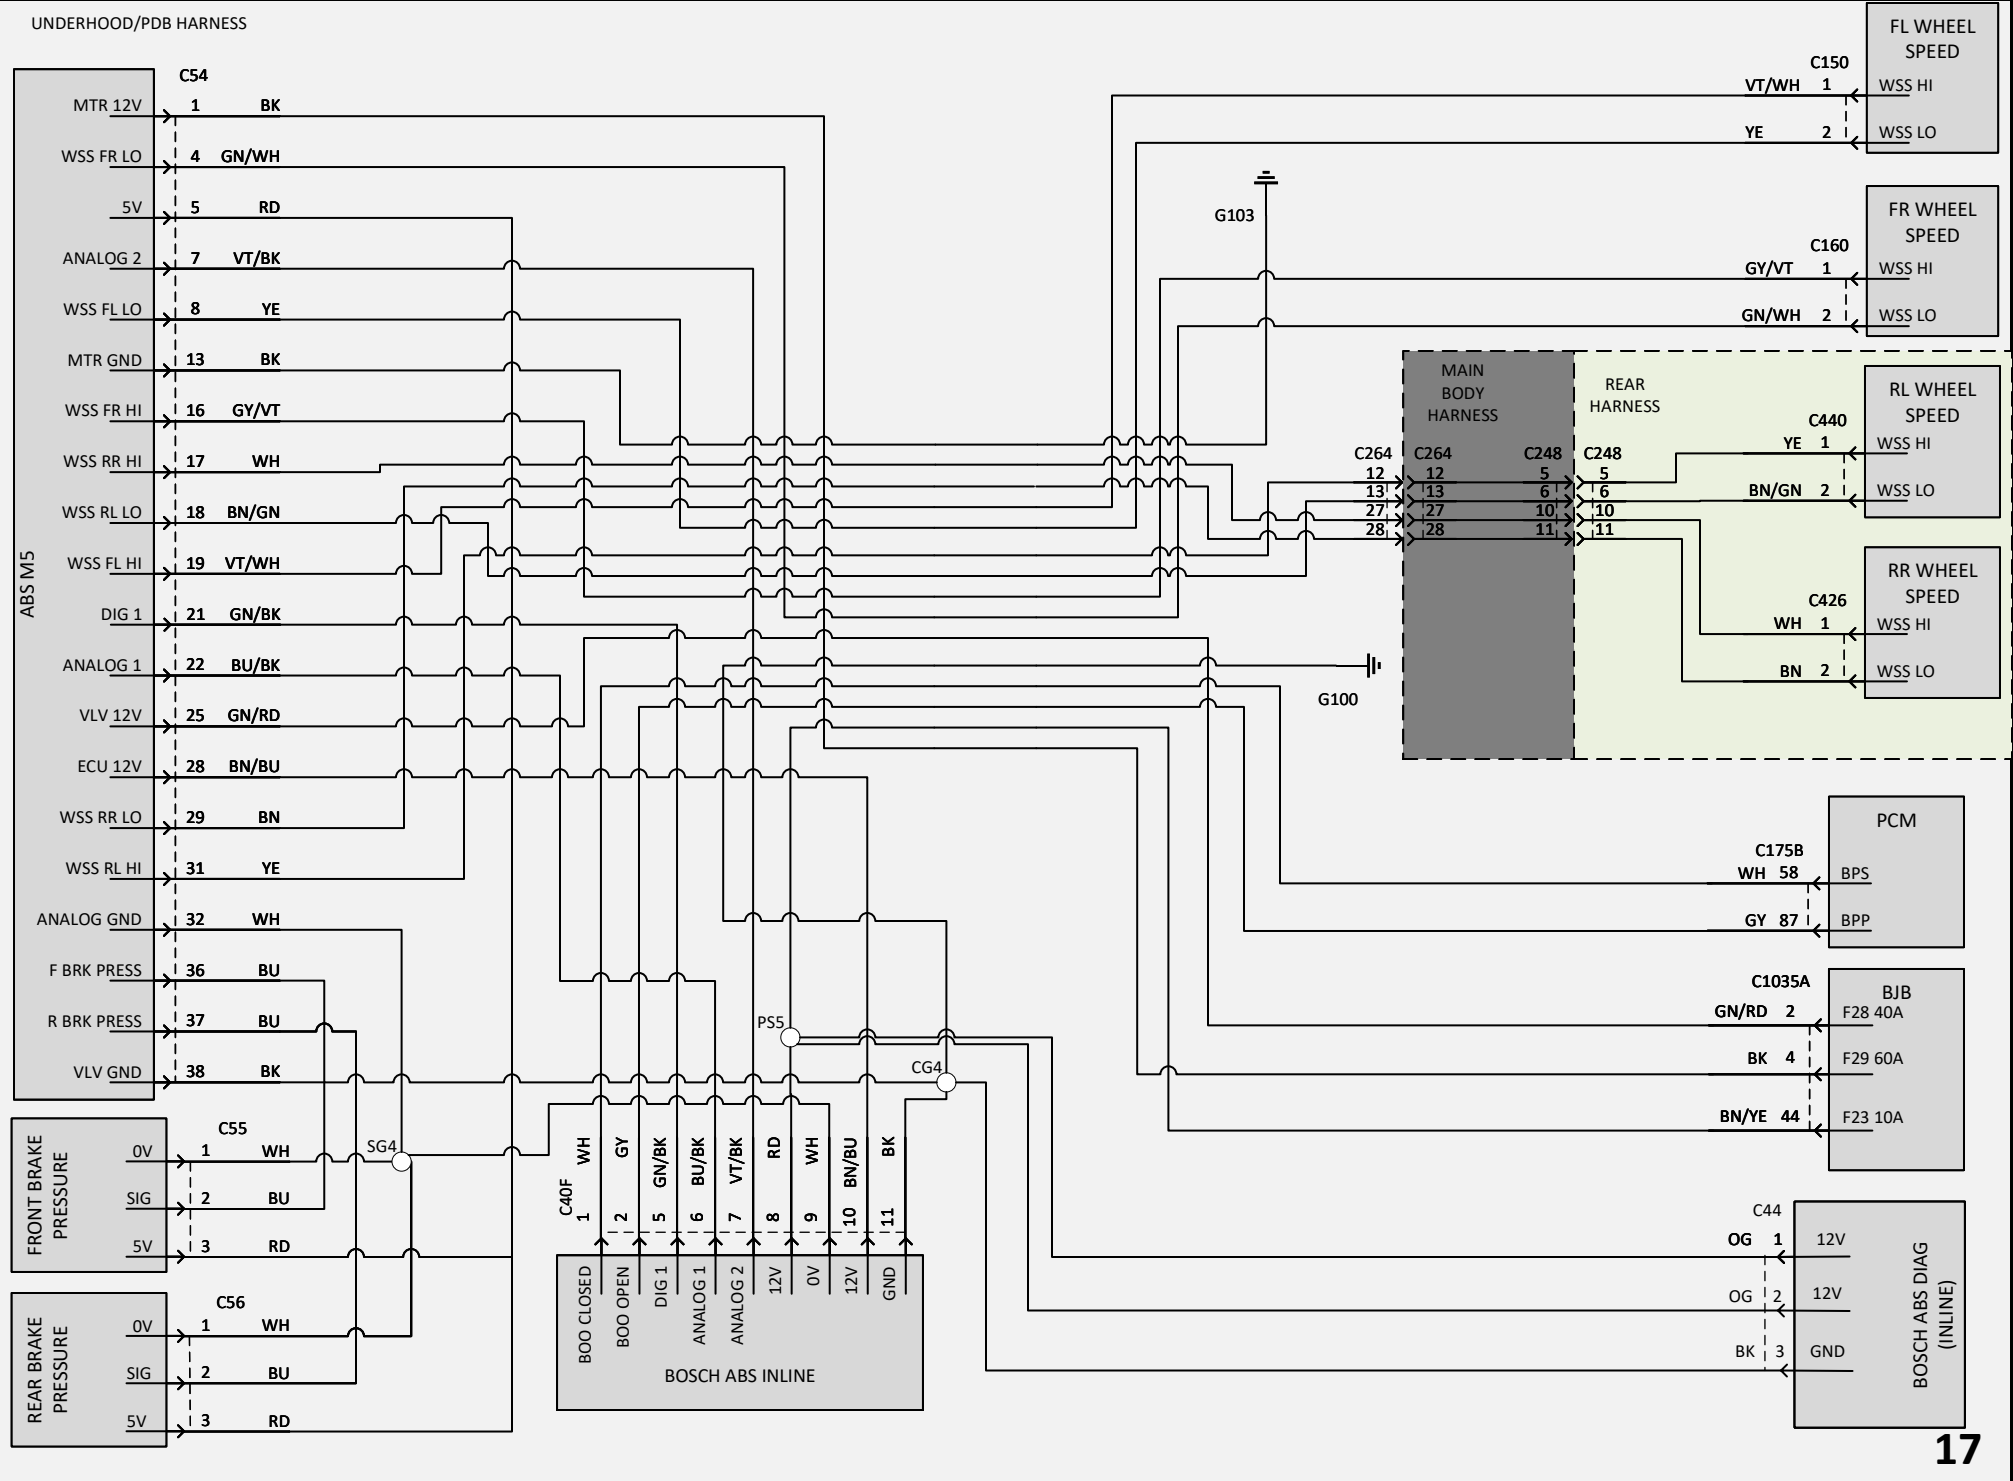


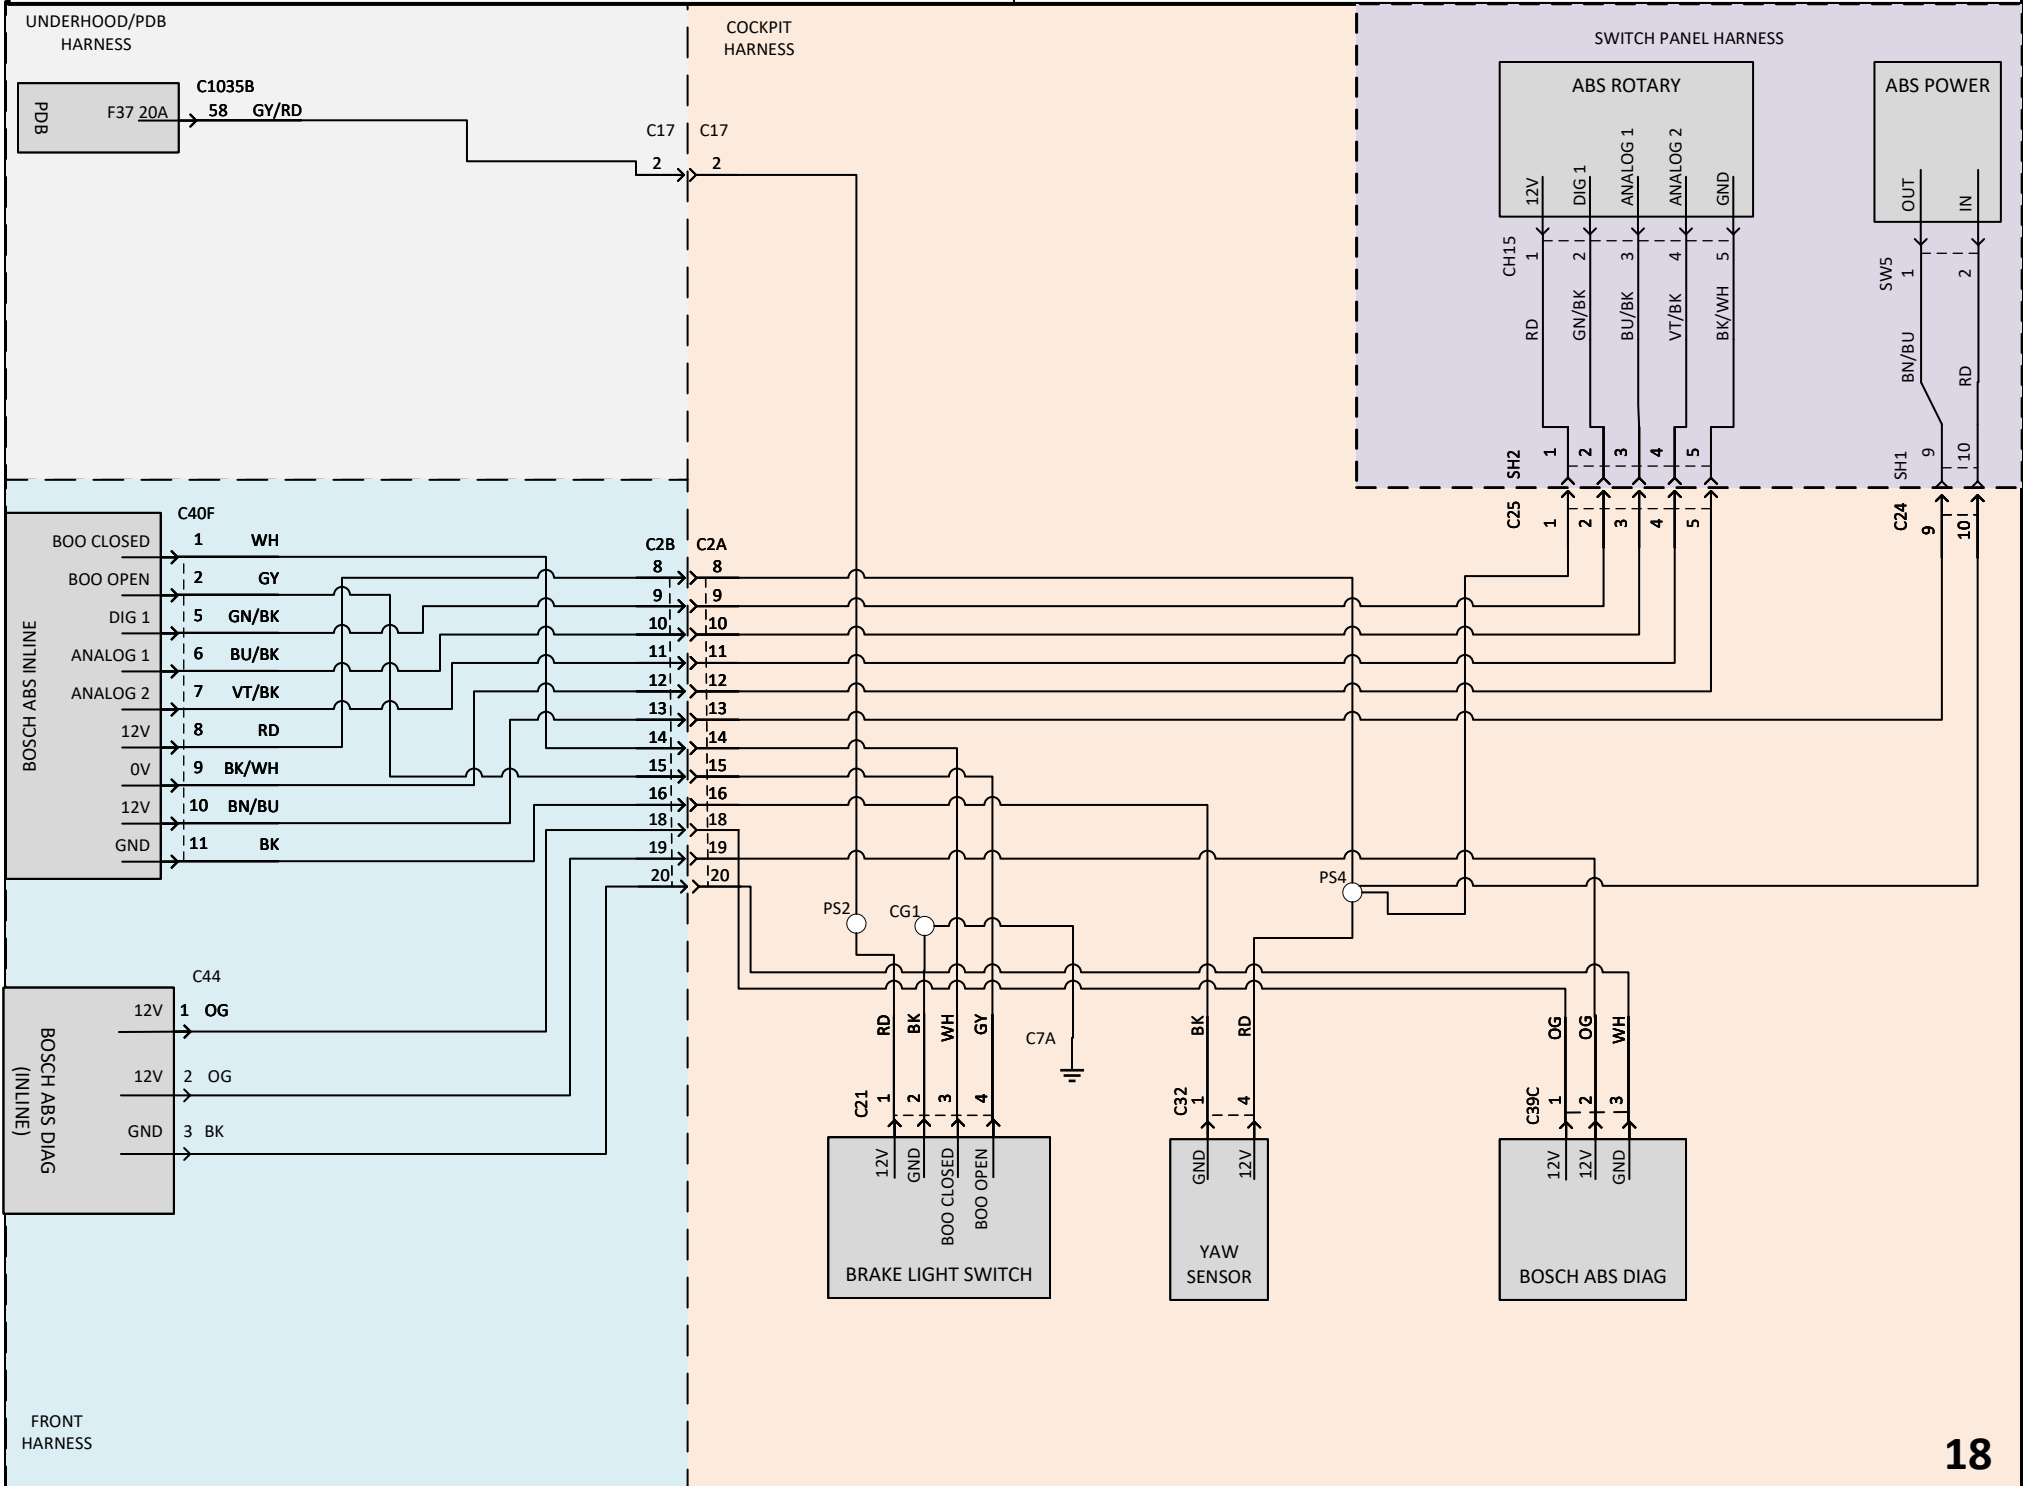


# 2024 Dark Horse R Data and Spares Schematic

N. Bartosiewicz, M.KENNY Rev003


COCKPIT HARNESS

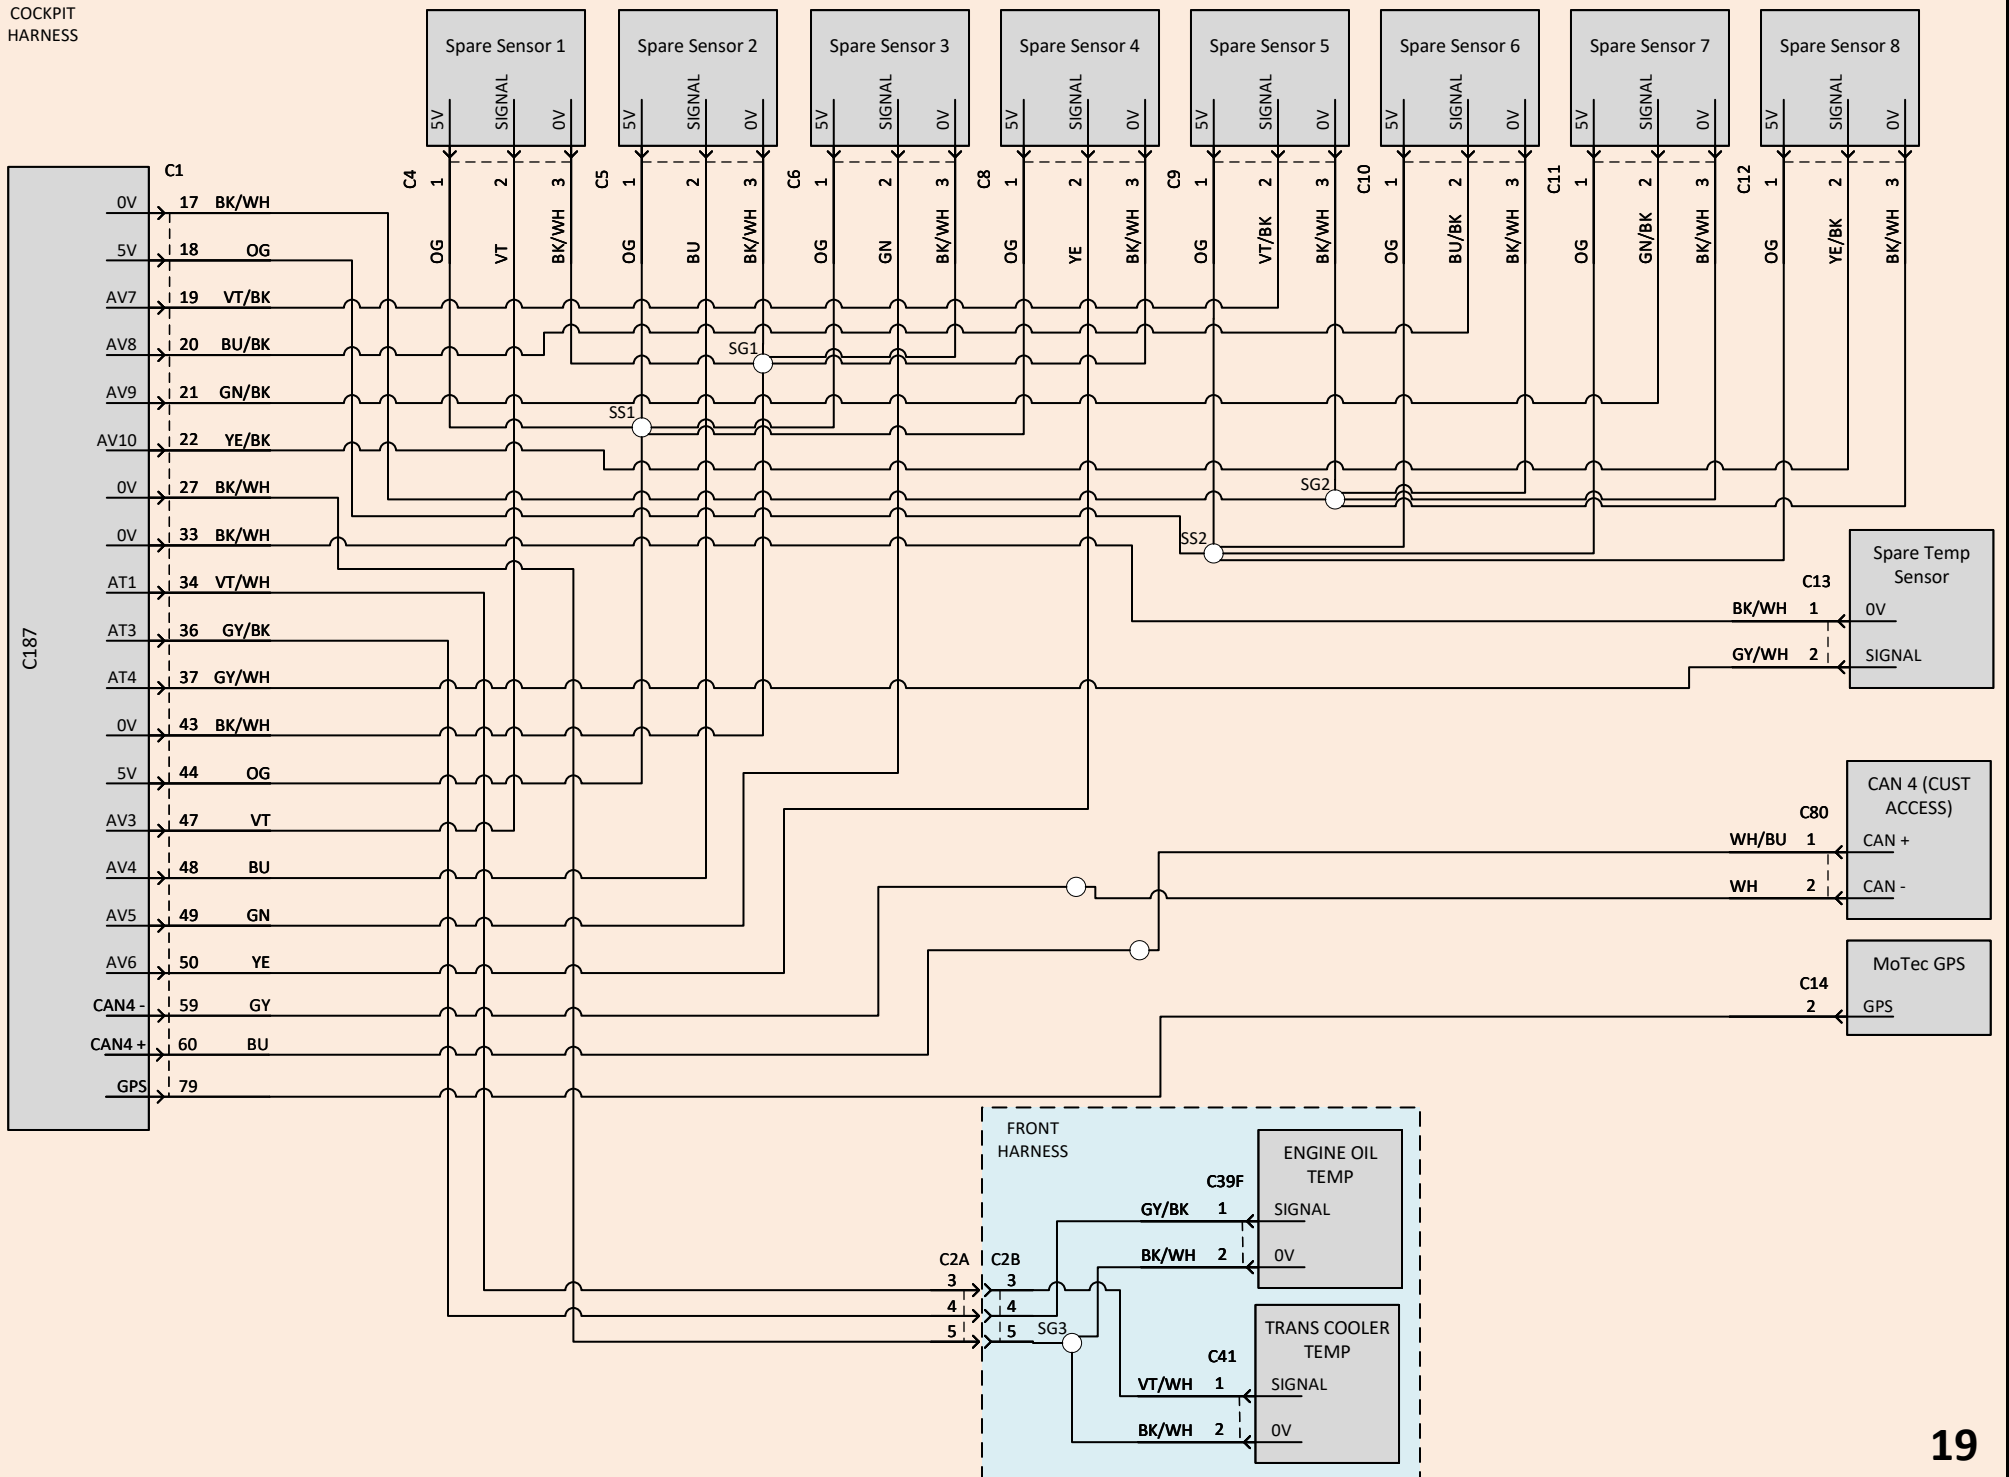


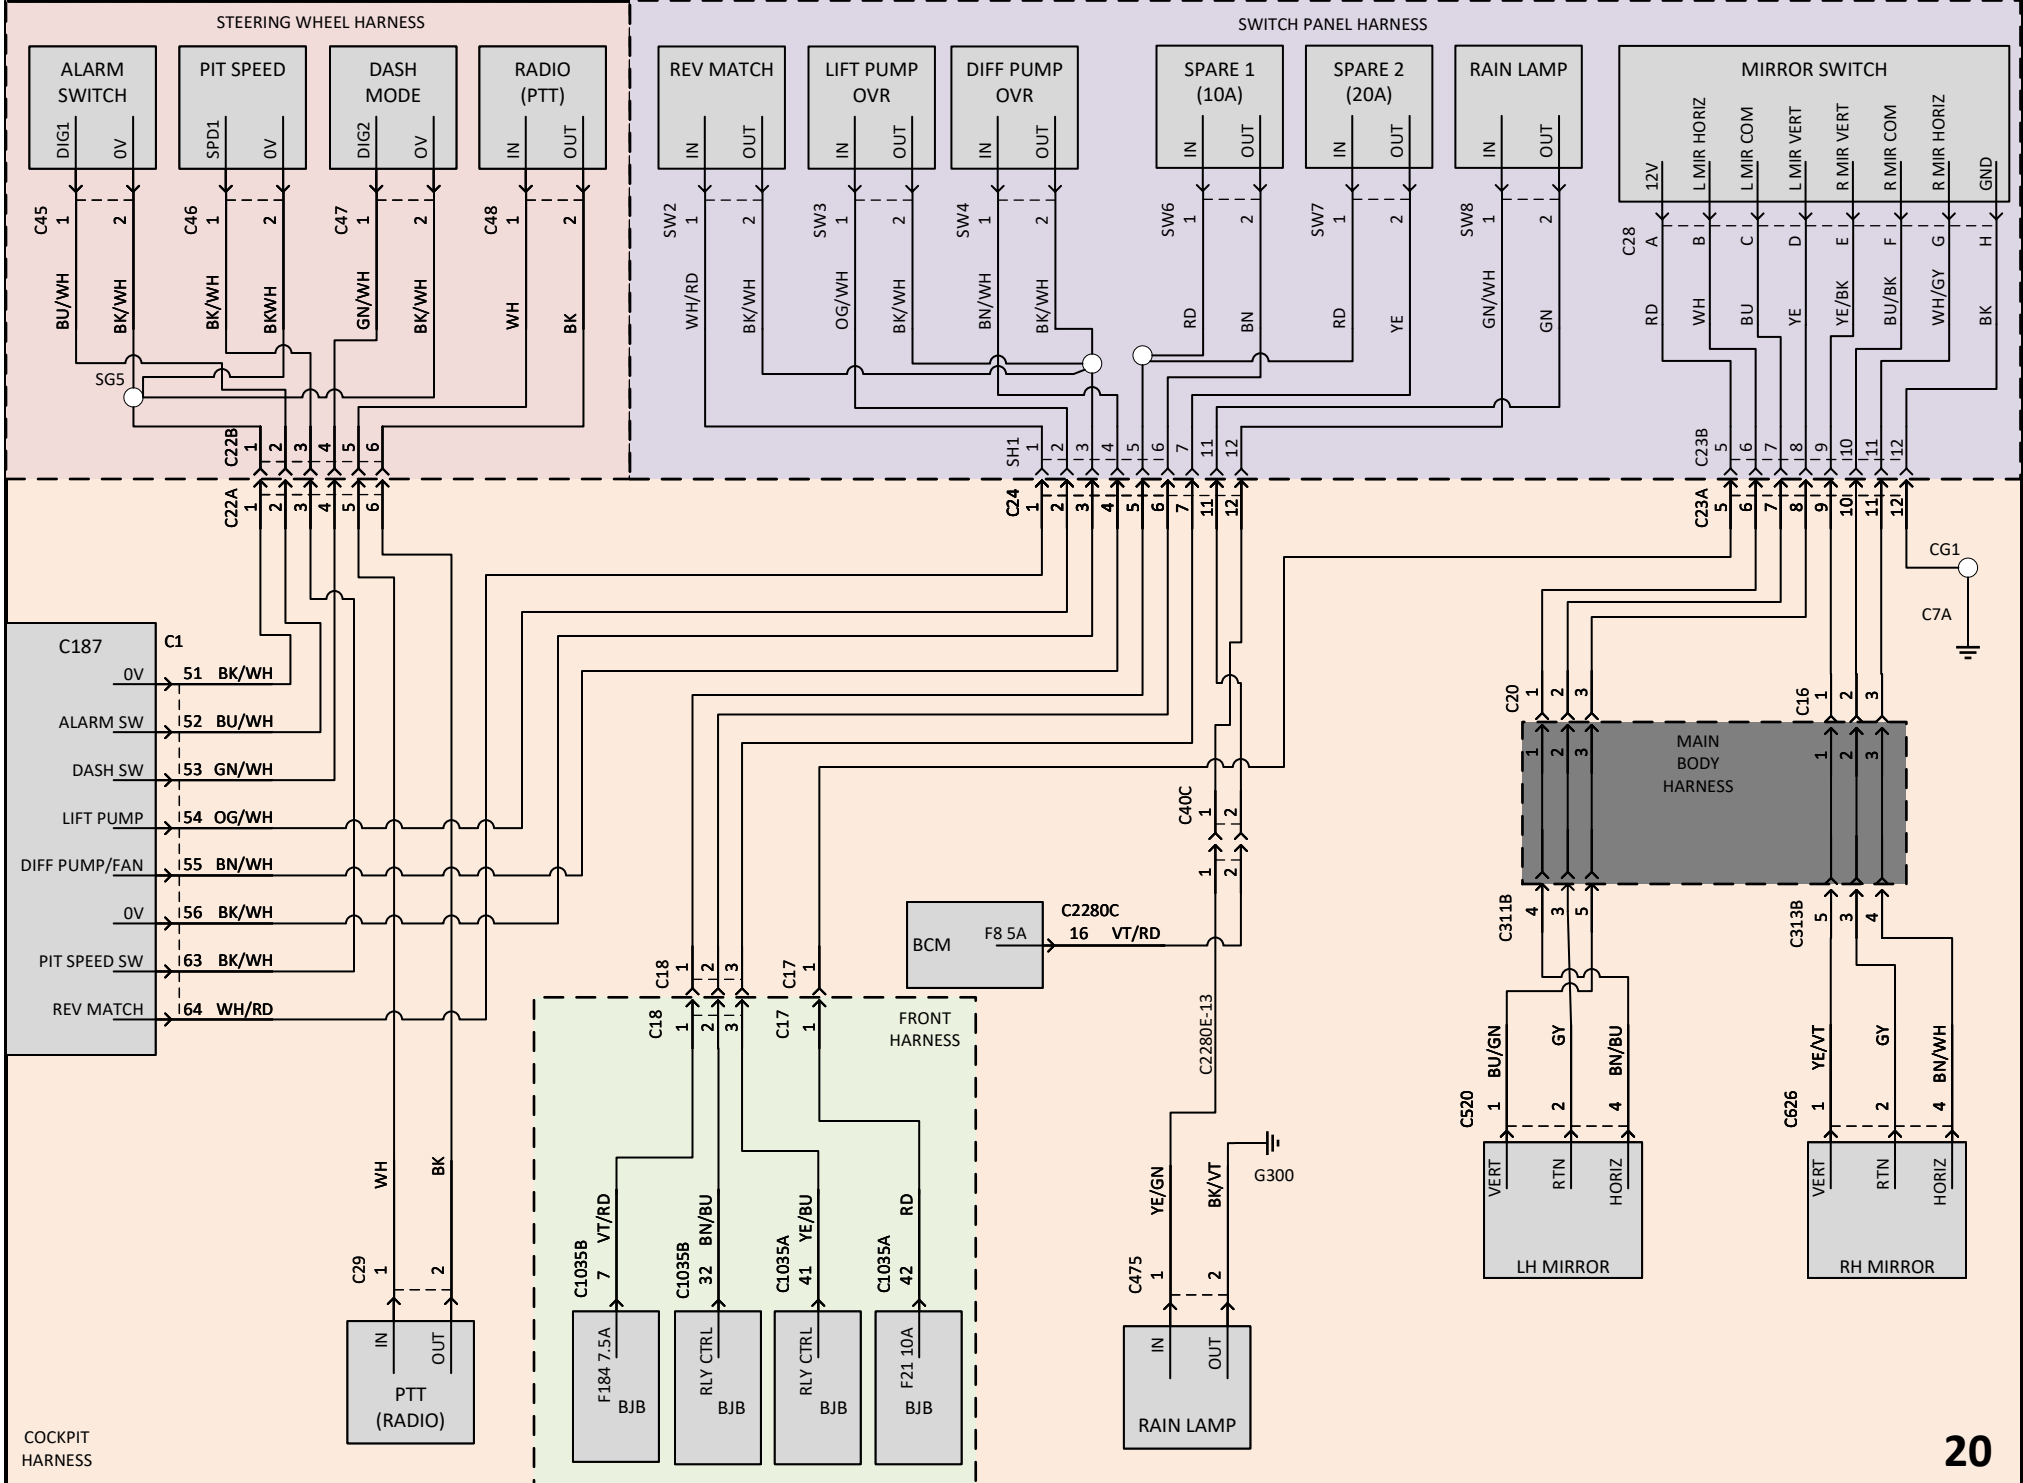

# 2024 Dark Horse R Powertrain Power Schematic

N. Bartosiewicz, M.KENNY Rev003

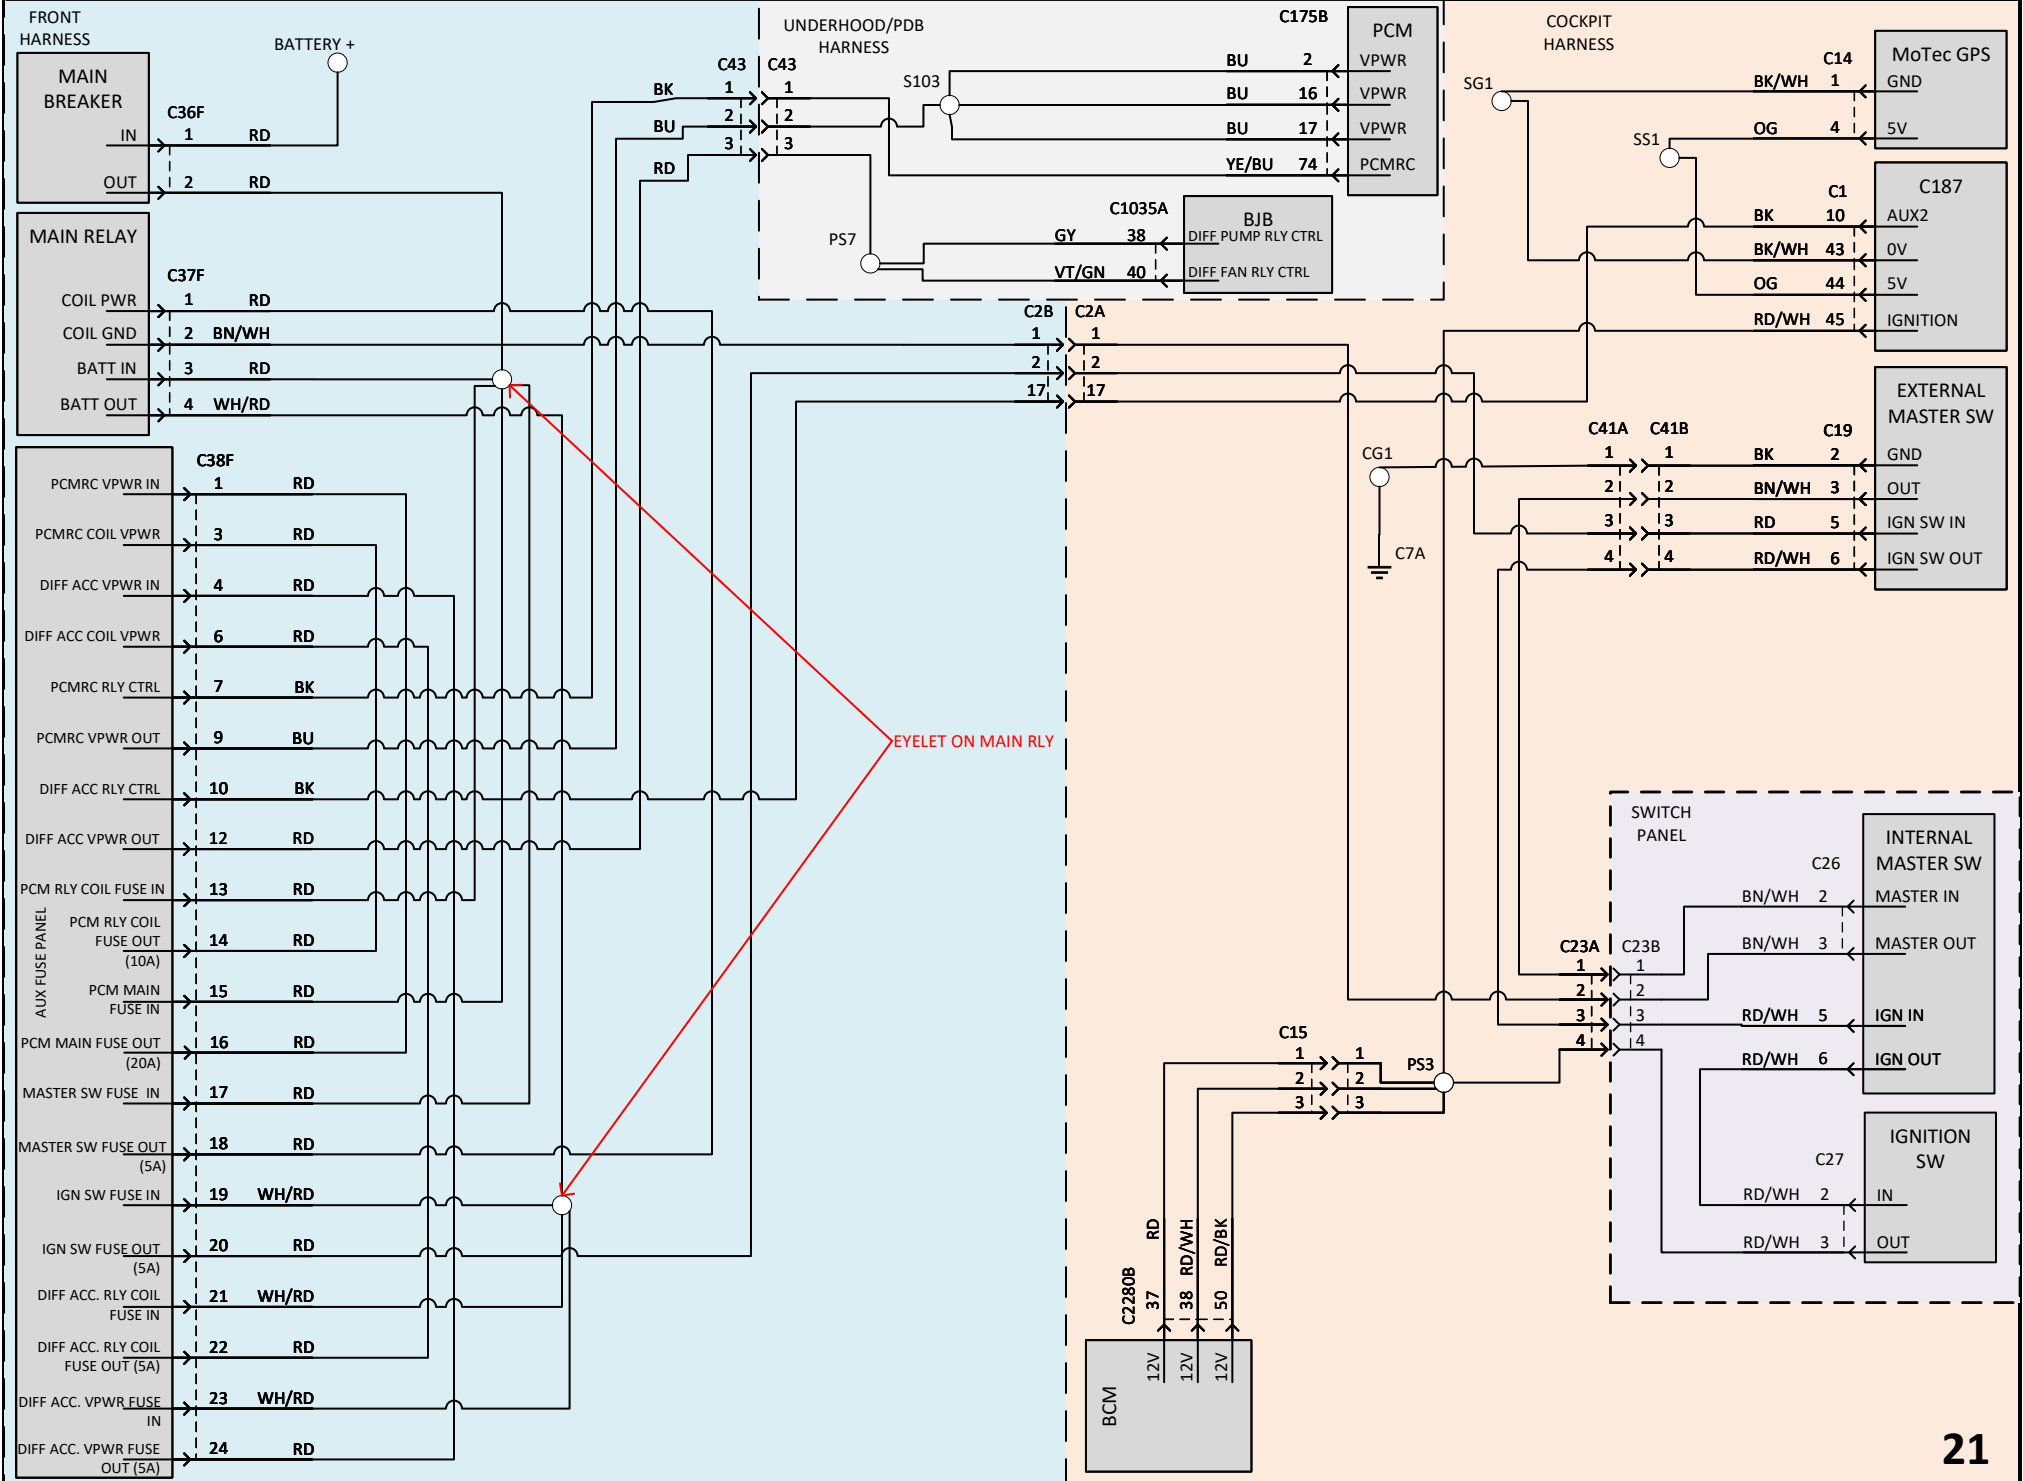

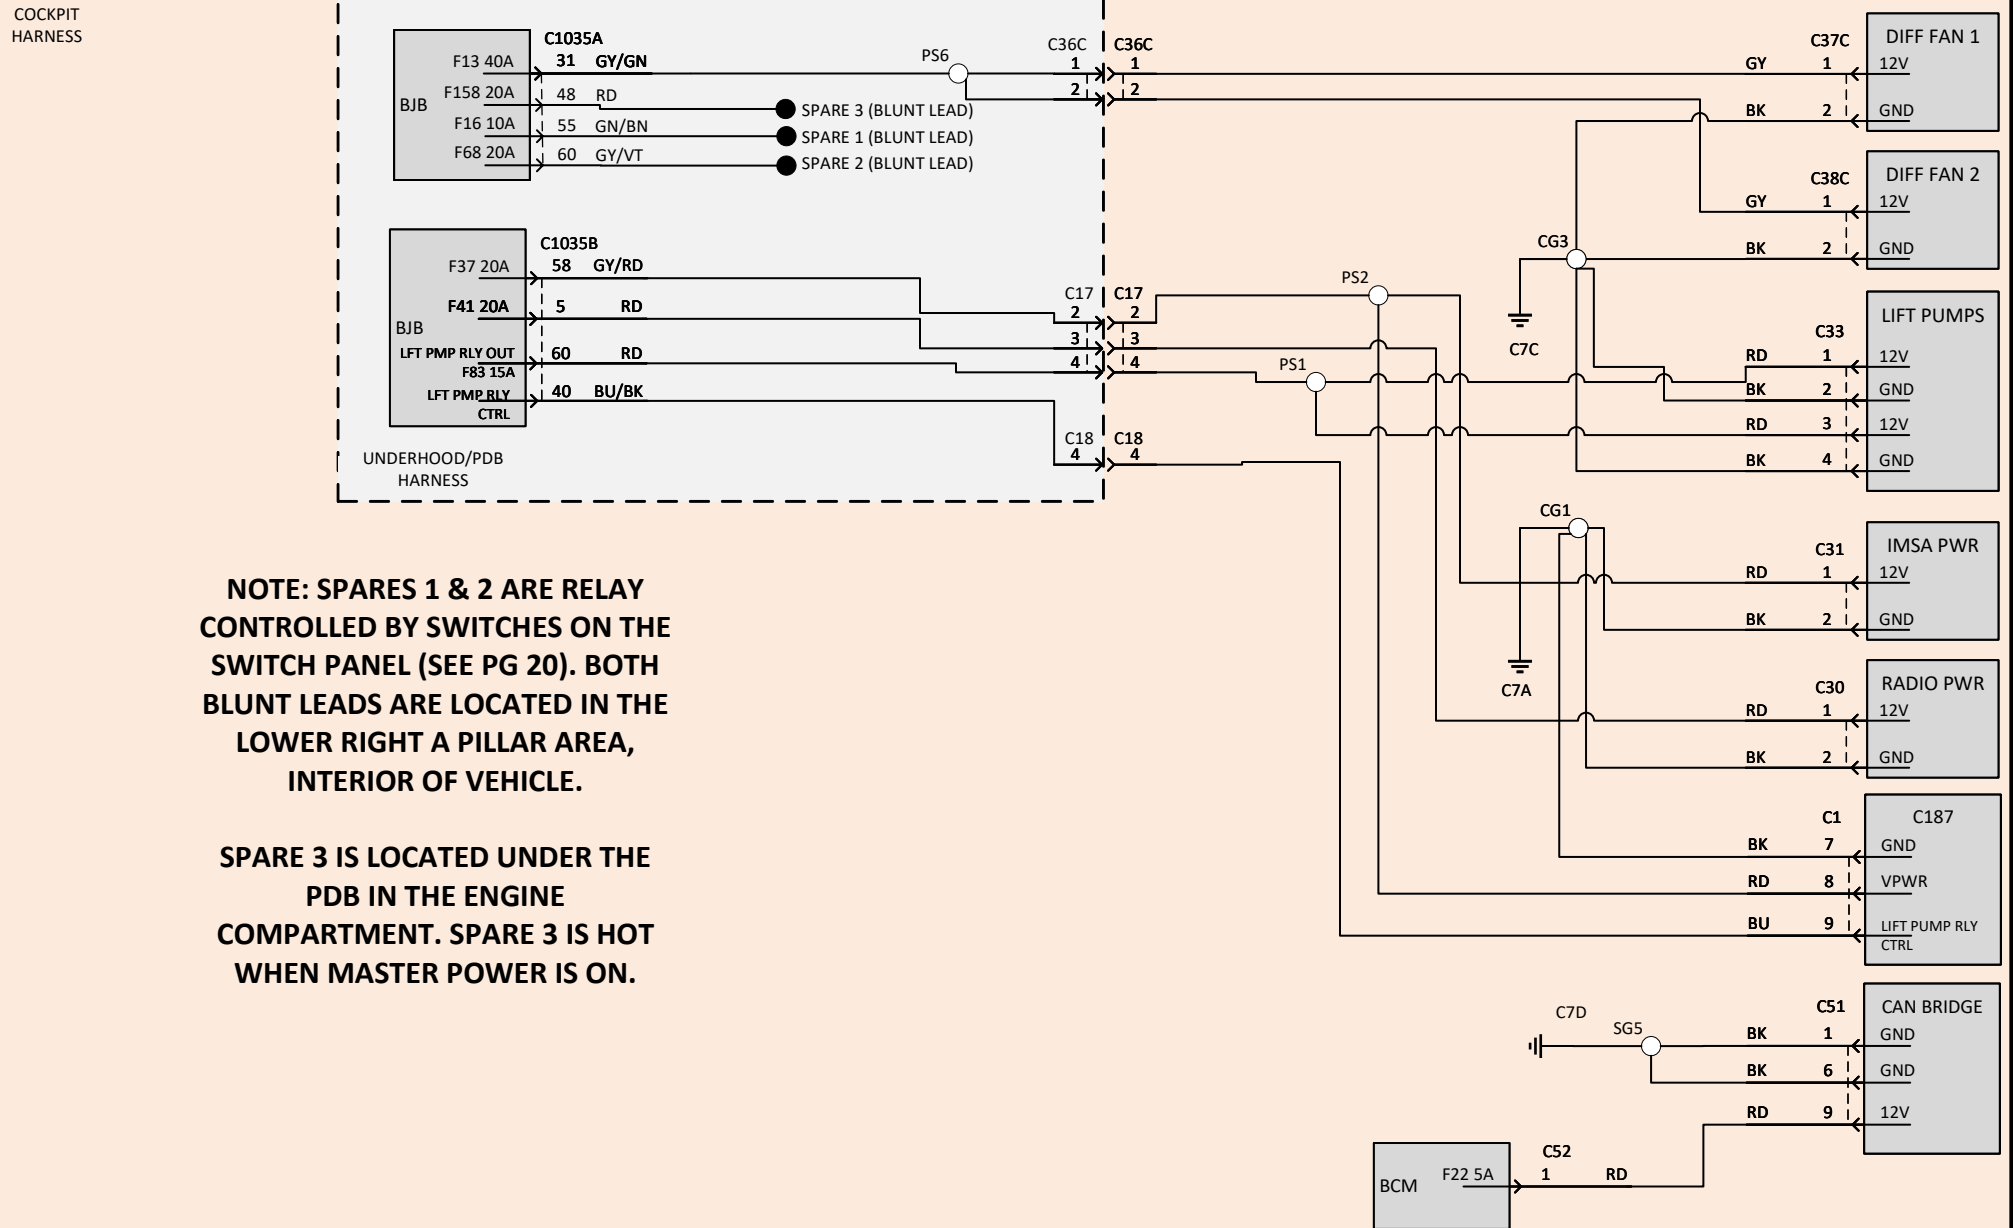

**NOTE: SPARES 1 & 2 ARE RELAY CONTROLLED BY SWITCHES ON THE SWITCH PANEL (SEE PG 20). BOTH BLUNT LEADS ARE LOCATED IN THE LOWER RIGHT A PILLAR AREA, INTERIOR OF VEHICLE.**

**SPARE 3 IS LOCATED UNDER THE PDB IN THE ENGINE COMPARTMENT. SPARE 3 IS HOT WHEN MASTER POWER IS ON.**

