

August 23rd, 2024

Technical Service Bulletin – 15


Exhaust Heat Wrap

Issue: Excessive exhaust heat can cause degradation of the half shaft boots and grease.

Action: Install heat wrap per the information below.

COOL IT Thermo Tec Exhaust Insulating Wrap

(available from HRP, or your preferred parts source)

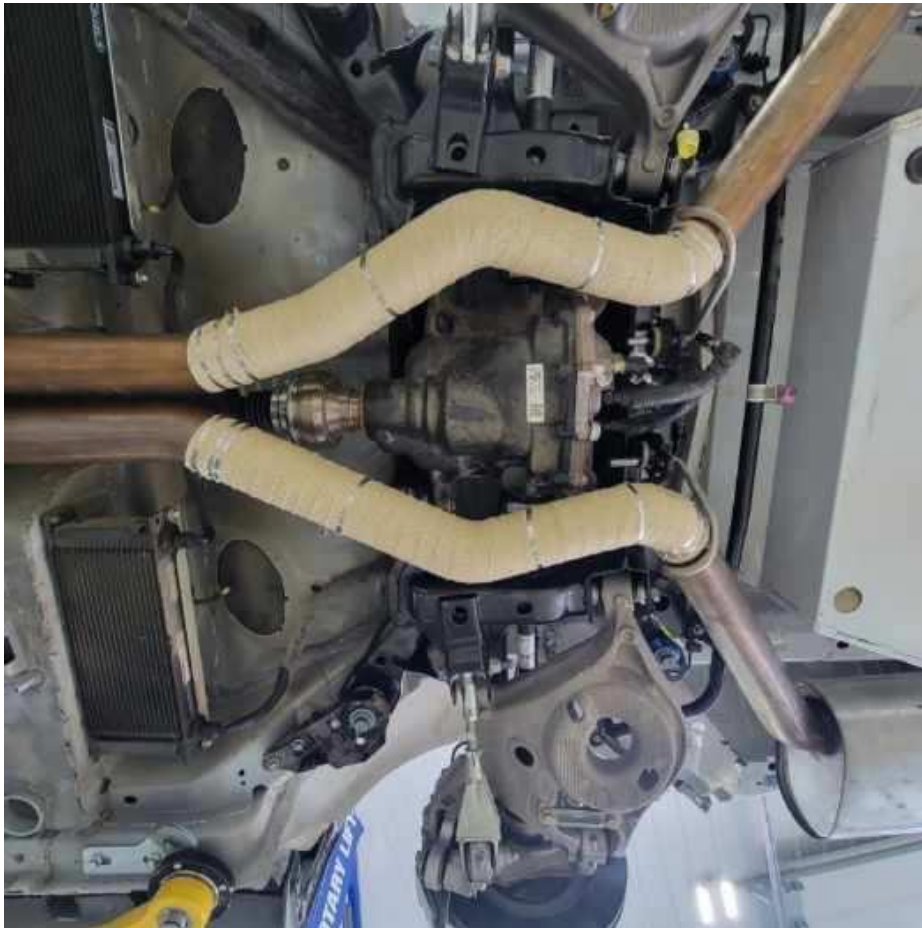

1. Install wrap as shown from the exhaust bend closest to the differential coolers up to the exhaust hangers located just behind the differential.
2. Use approximately a 50% overlap of the wrap.
3. Use band clamps on both ends. Additional clamps may be used as desired.

Note: Please inspect half shafts for signs of temperature related degradation and replace as necessary.