FORDPERFORMANCE





February 19, 2025

Technical Service Bulletin – 38

Front Fascia Mount Repair

Purpose: To support fascia with damaged corner mounts. This is the only homologated repair allowed.

New parts

Description	QTY	Part Number	Supplier
Quik-Latch Mini, Machined Aluminum	2	QL-25-S	Quik-Latch *
Quik-Latch Mini, Polished Aluminum	2	QL-25-SP	Quik-Latch *
Quik-Latch Mini, Anodized Black	2	QL-25-SB	Quik-Latch *
Quik-Latch Mini, Anodized Red	2	QL-25-RD	Quik-Latch *
Quik-Latch Mini, Anodized Blue	2	QL-25-BU	Quik-Latch *


*All available finishes for the Quik-Latch Mini are legal. Two Quik-Latches are required per vehicle.

2

Quik-Latch Long Stud

QL-25-08-04

Quik-latch

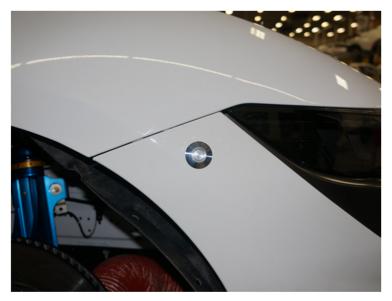


Installation

Remove front fascia and locate the vertical front fascia support on fender



Center punch for the Quik-Latch on the center rib 1 3/8" down from the top

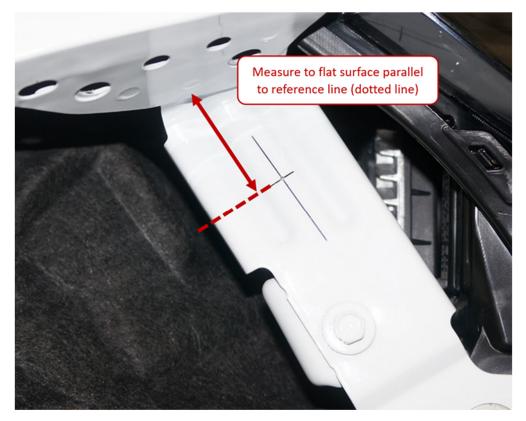

Drill a 1/8" hole in the center rib 1 3/8" down from the top




Open the 1/8" hole up to 1/4".



Install Quik-Latch long stud where the head of the stud is just flush with the fender.




Remove fascia to fender bracket by pulling push pin

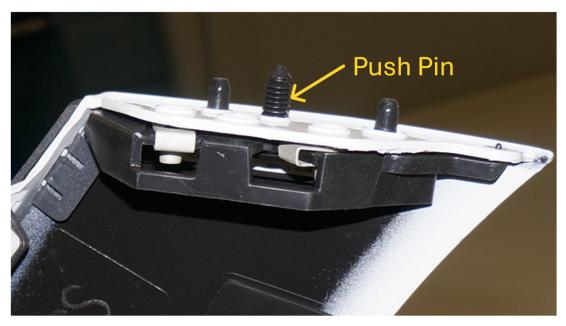

Shown with bracket removed



Align the fascia back on the vehicle in the production position, then tap on the fascia over the Quik-Latch ball end stud with the palm of your hand to dimple the back of the fascia where the Quik-Latch is to be installed

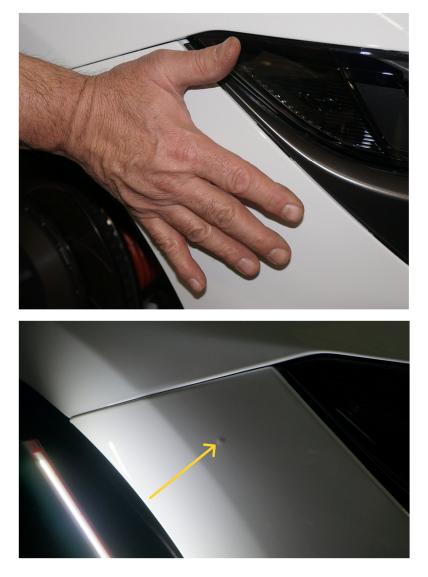

Drill 1/8" pilot hole through the fascia.



Open the fascia holes to $\frac{3}{4}$ " and install buttons.



Clearance and reinstall fender brackets





Reinstall Fascia and adjust studs to desired length

